




**STD5 01**


Assembly instruction






 


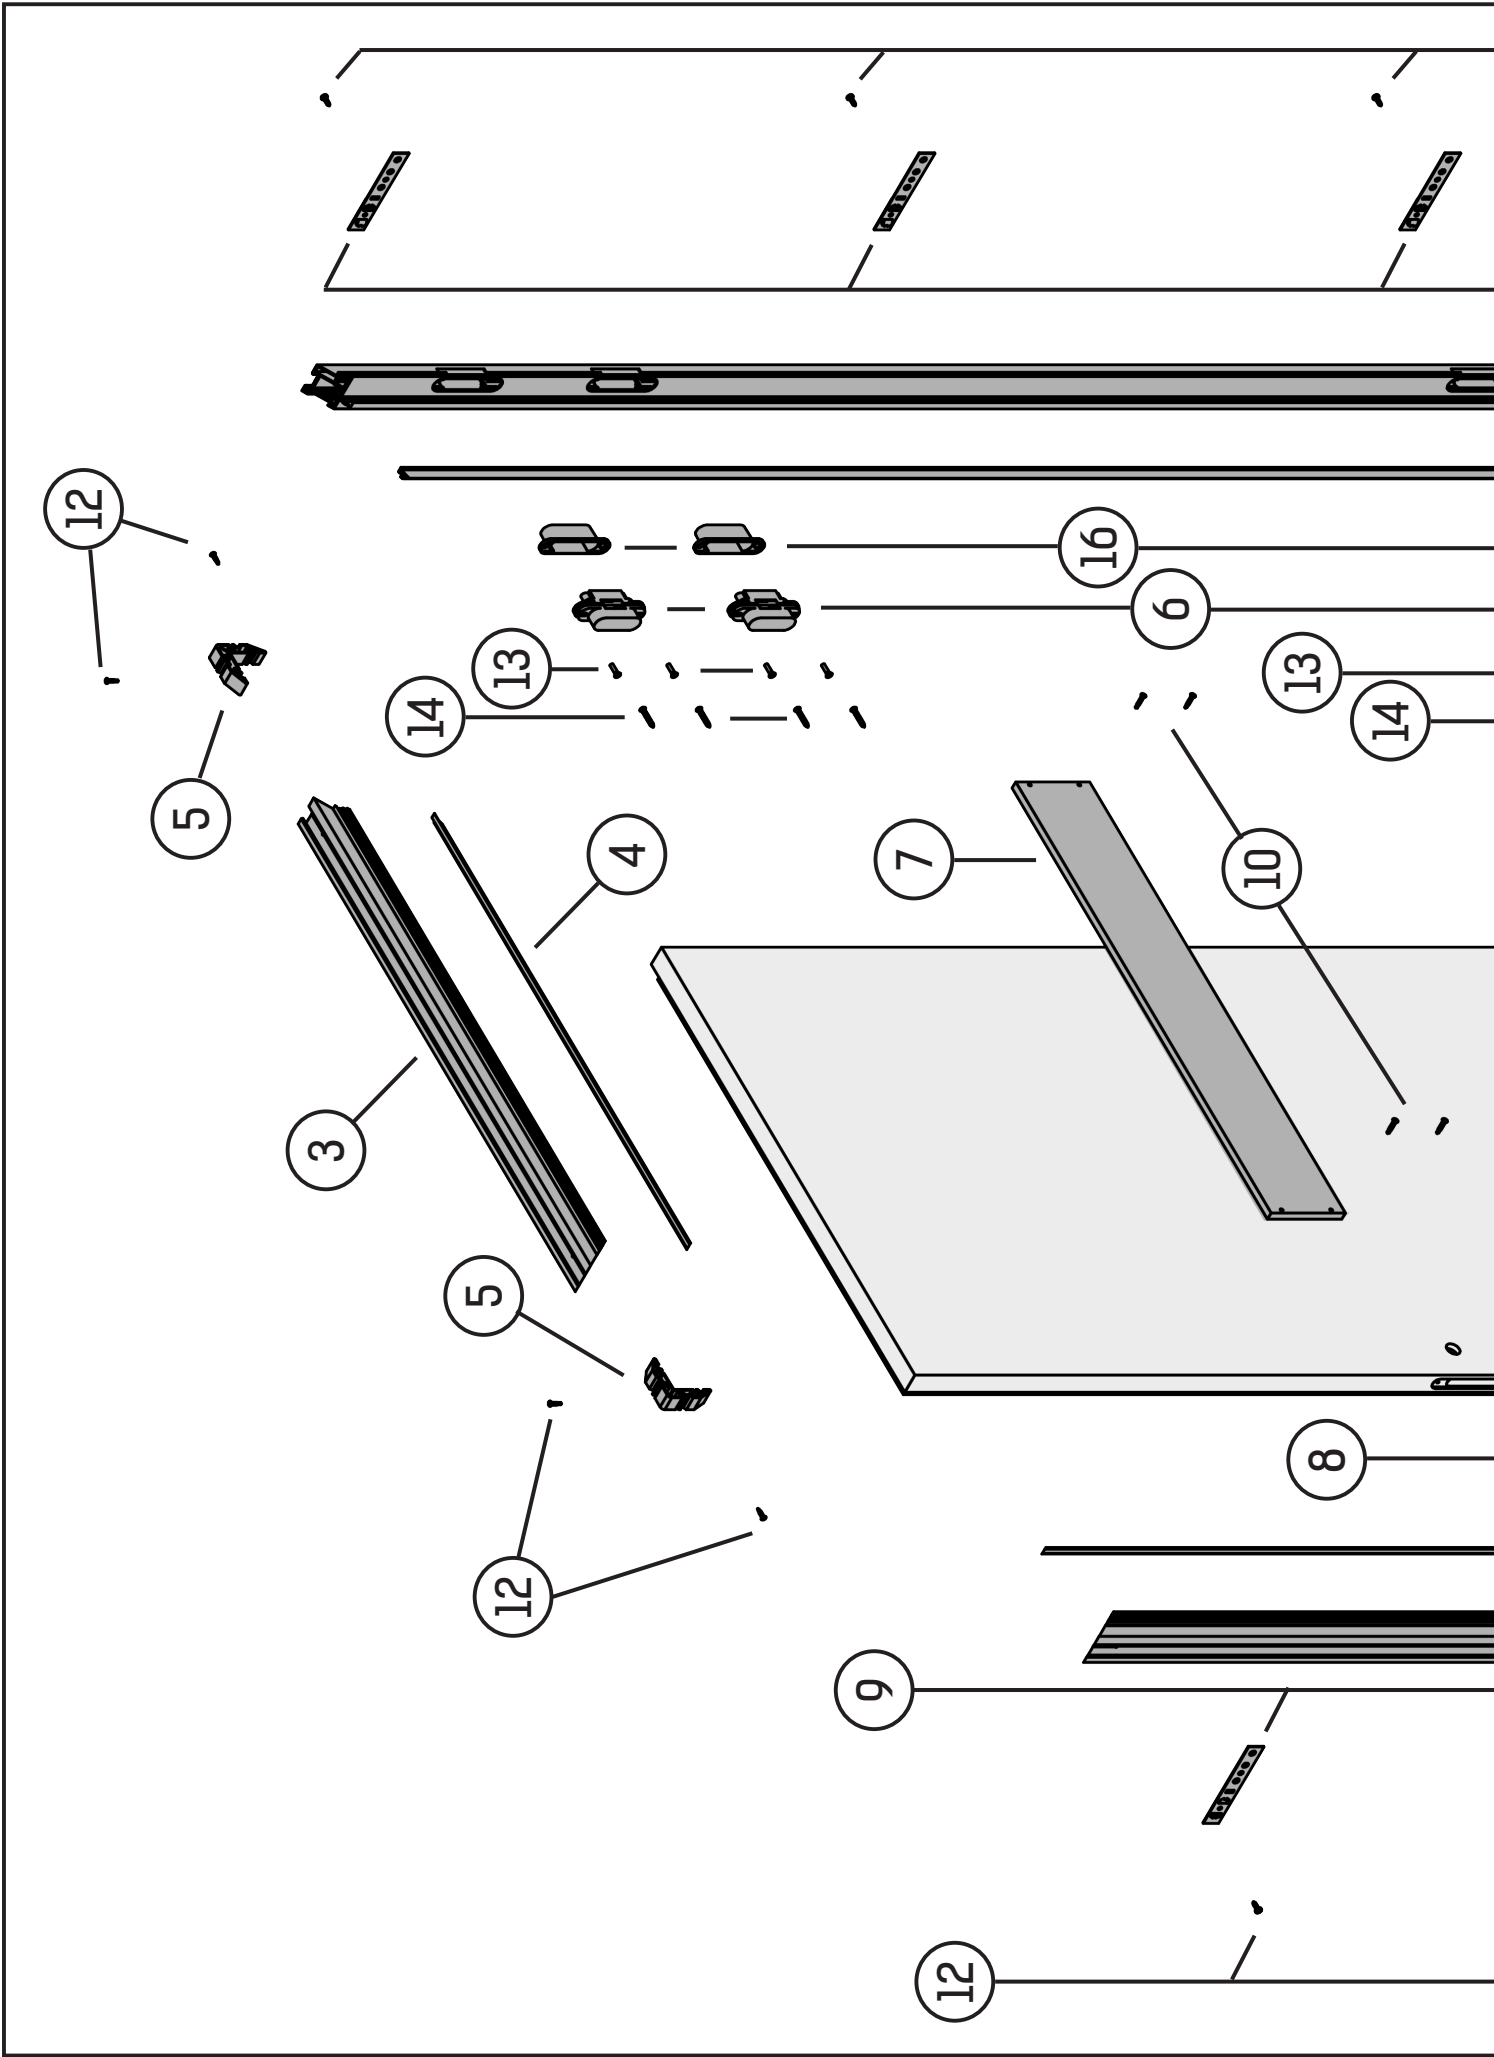

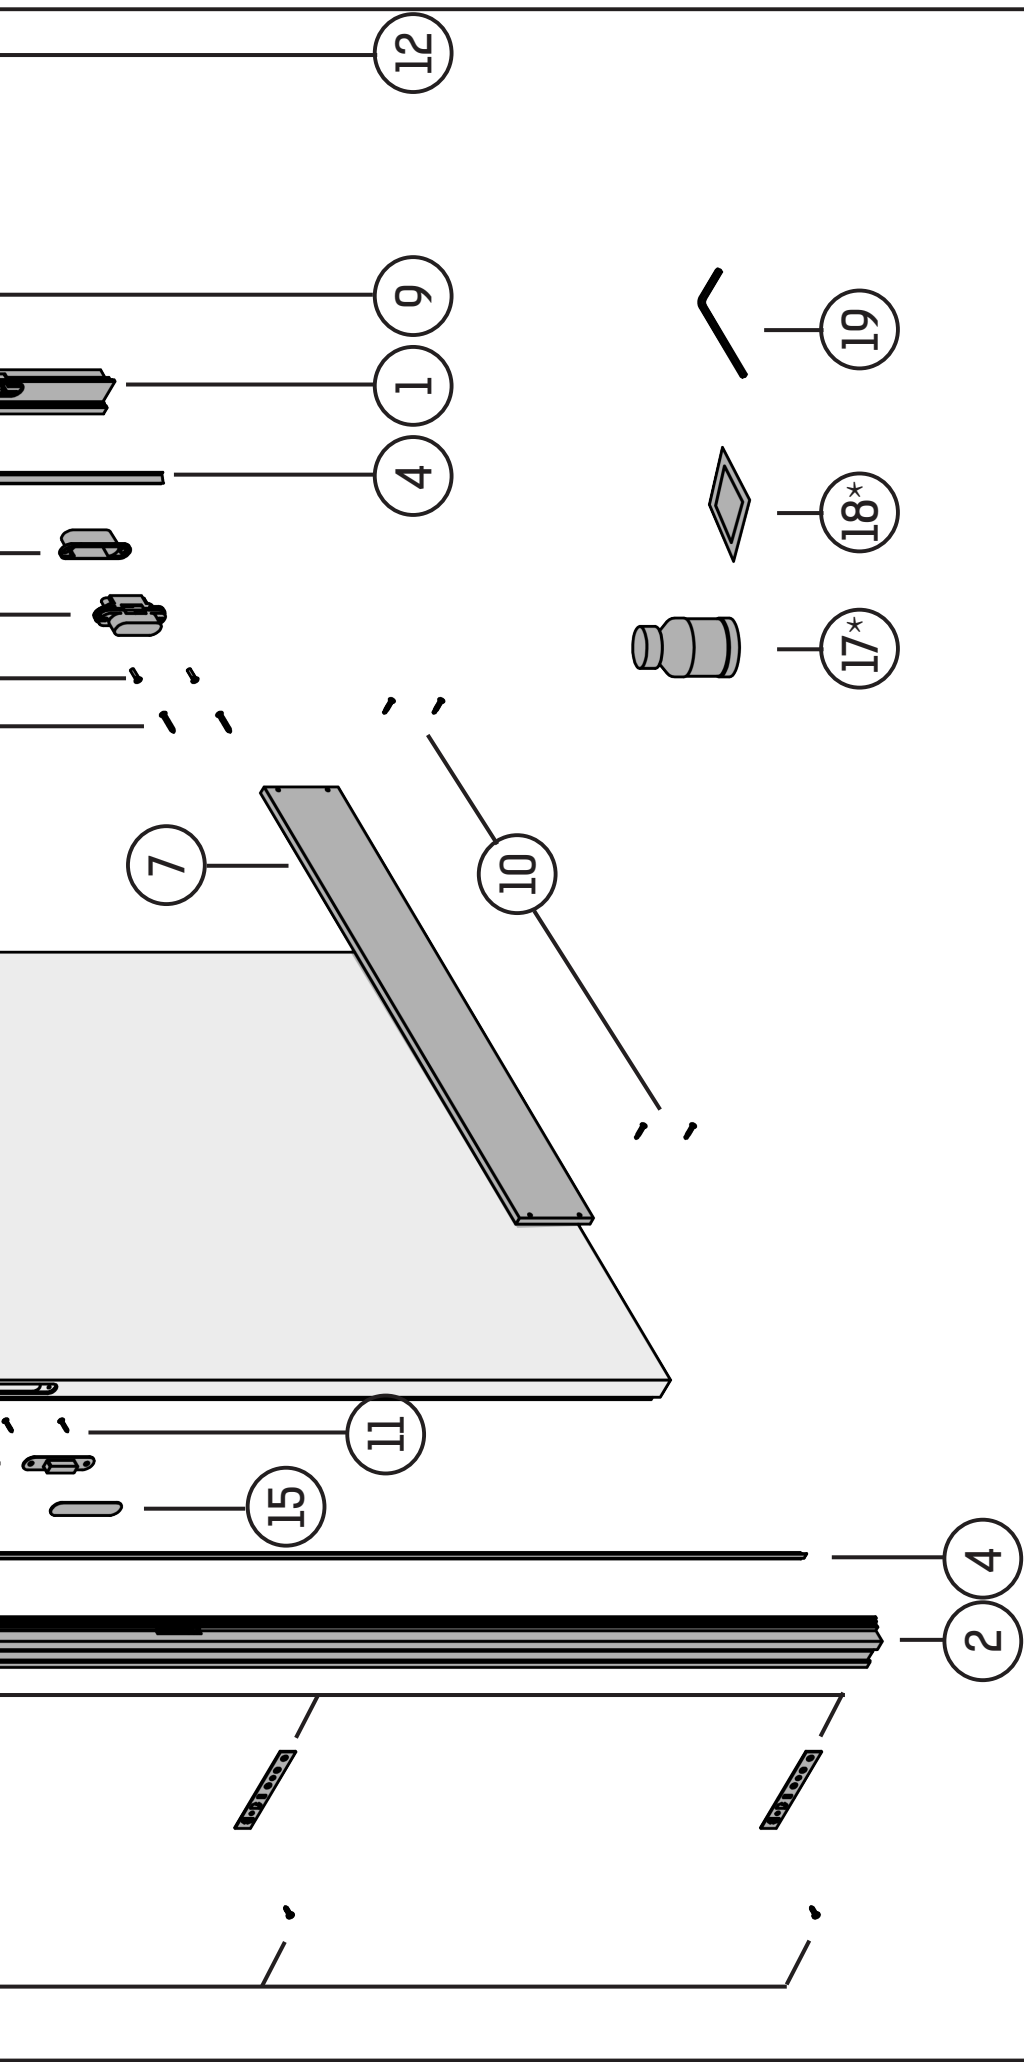

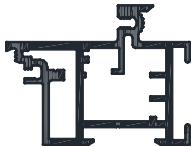






# **GREEN DOORS '50**


## **DOOR FRAME**

opened outward






1.		x1	6.		min. x2	11.		3,5x22 x2	16.		min. x2
2.		x1	7.		x2	12.		4,2x19 x10	17.*		x1
3.		x1	8.		x1	13.		M5x16 min. x4	18.*		x1
4.		x3	9.		x6	14.		4,5x35 min. x4	19.		x1
5.		x2	10.		4,2x25 x8	15.		x1	* option		

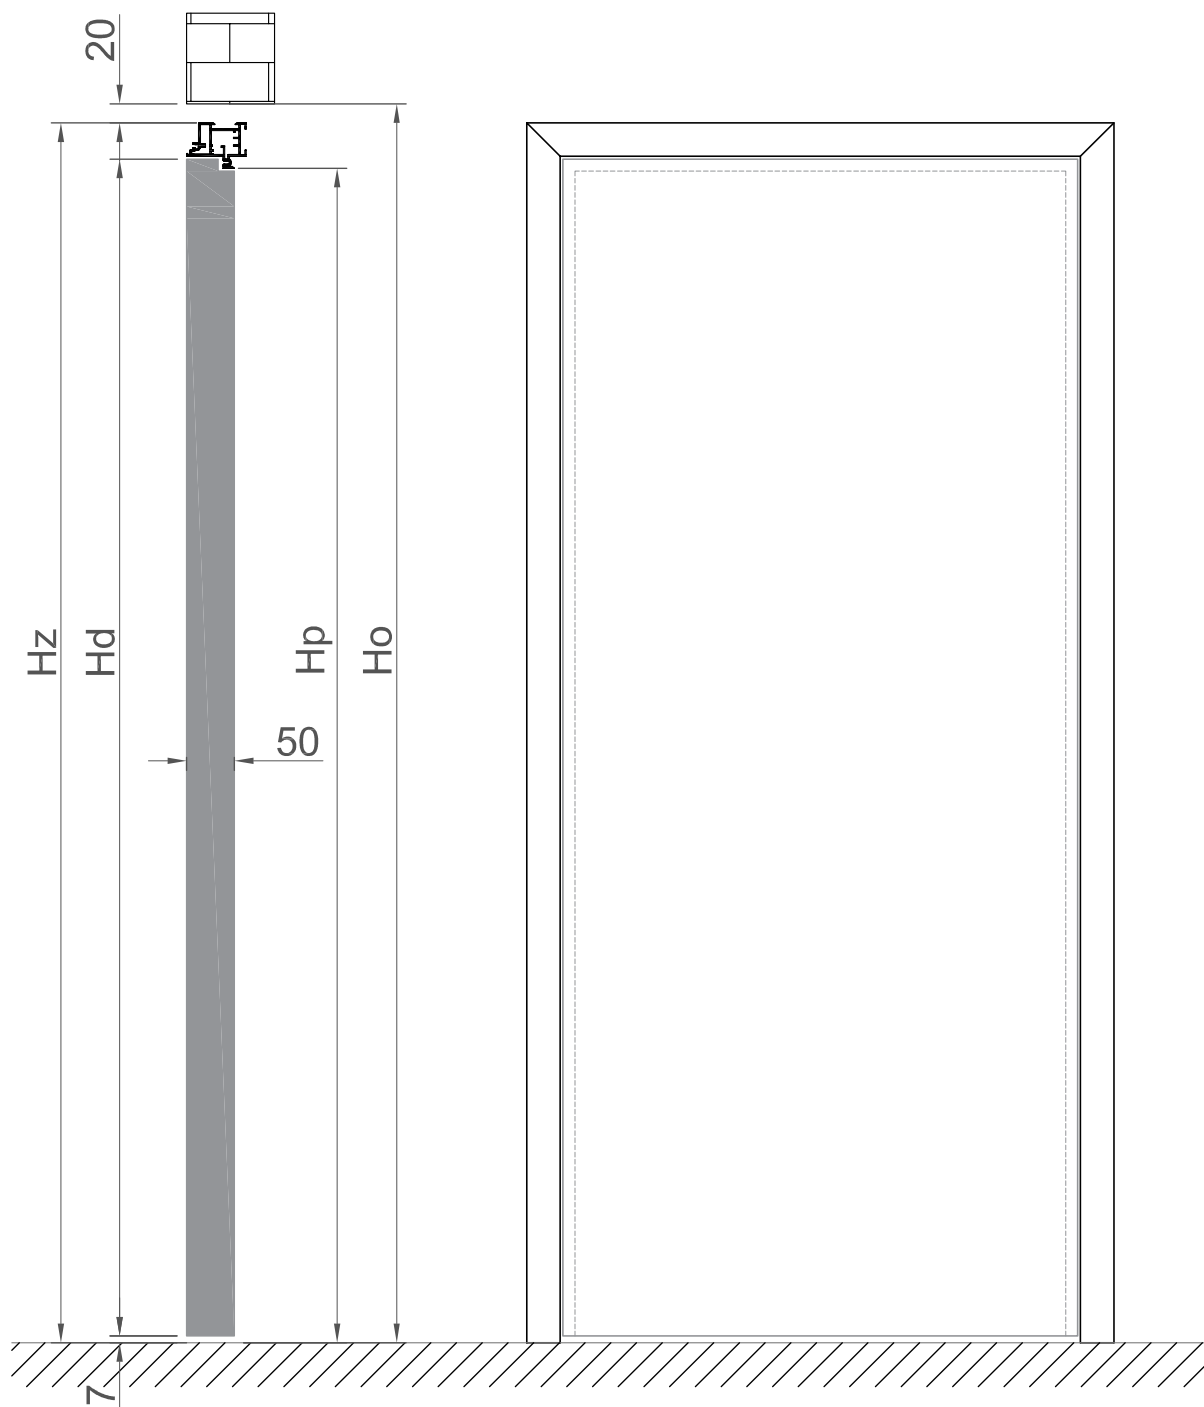

[mm]	Sd	Sp	Sz	So
60'	620	601	696	710
70'	720	701	796	810
80'	820	801	896	910
90'	920	901	996	1010
100'	1020	1001	1096	1110

[mm]	Hd	Hp	Hz	Ho
200'	2020	2017	2065	2085

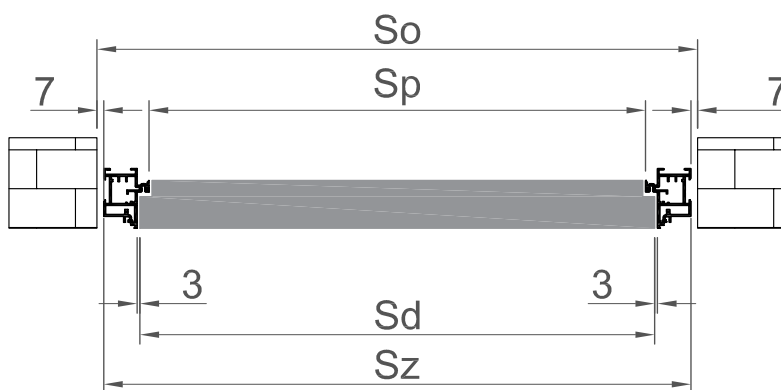





[1]




[2]

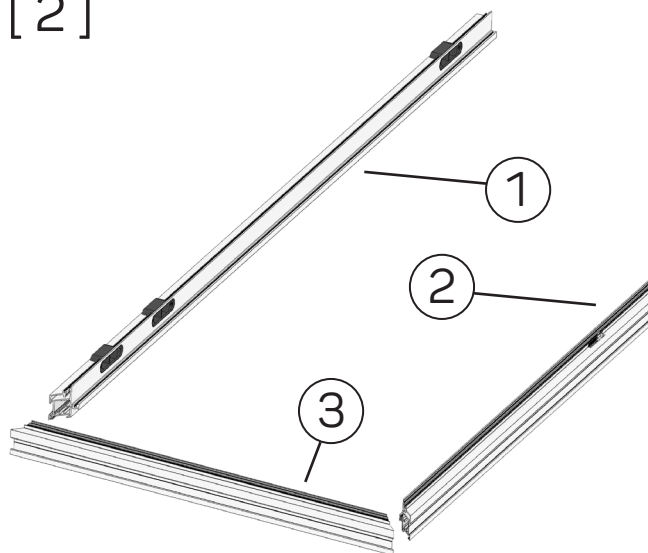


[3]

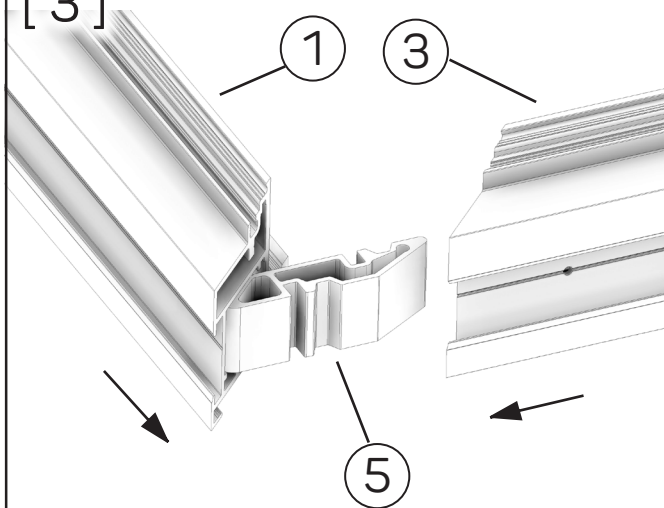


[4]

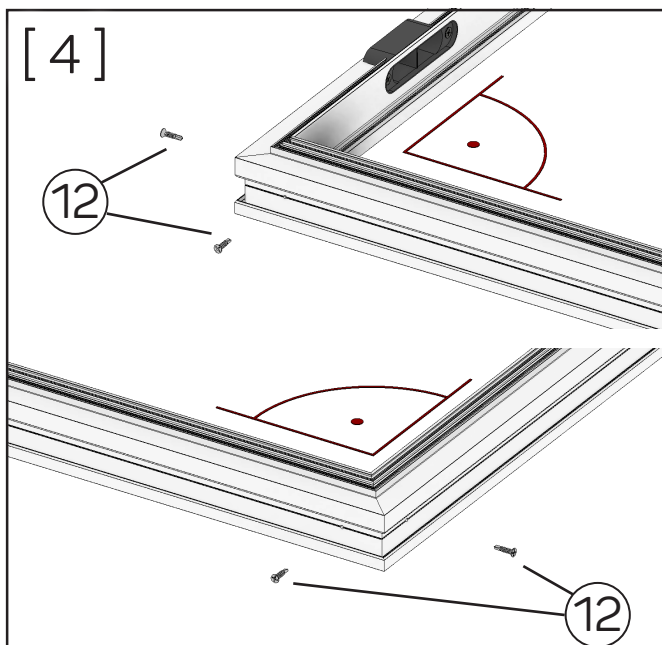


[5]

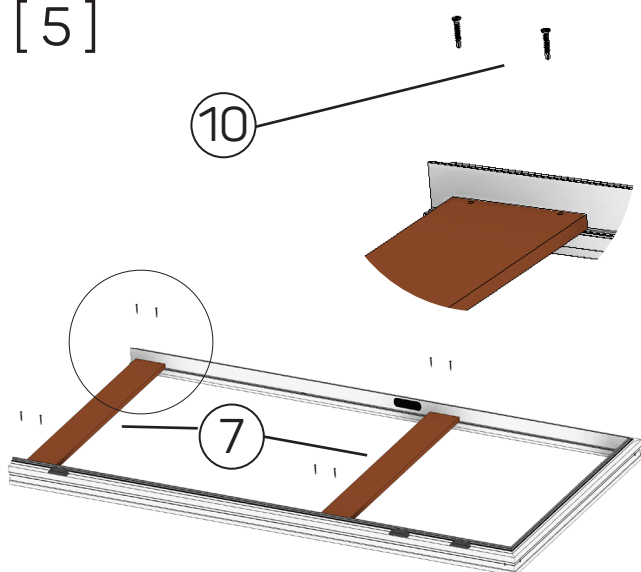


[6]

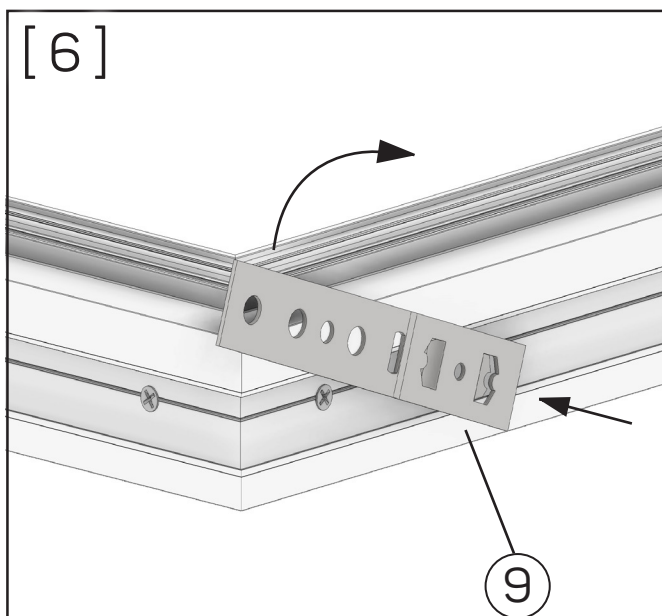


[ 7 ]

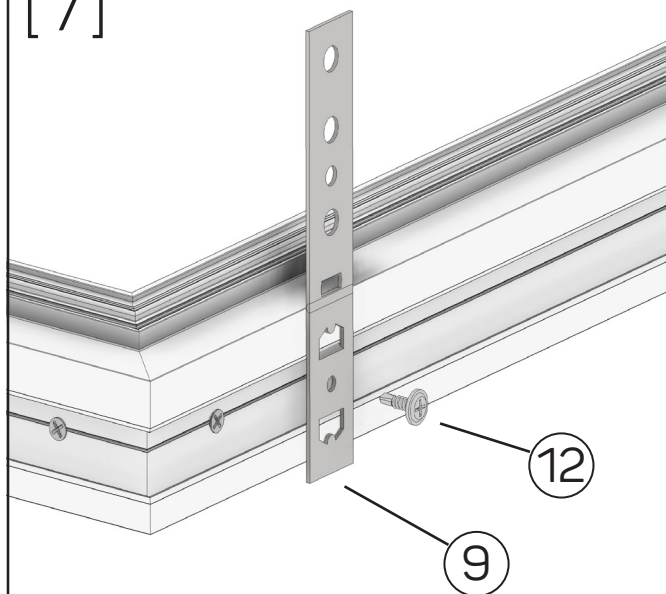


[ 8 ]

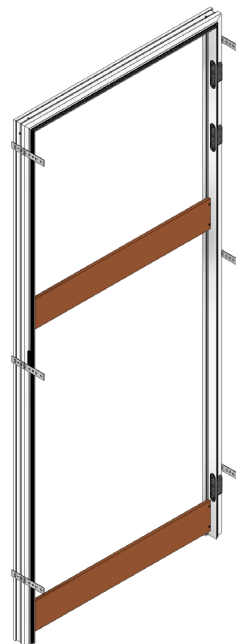


[ 9 ]

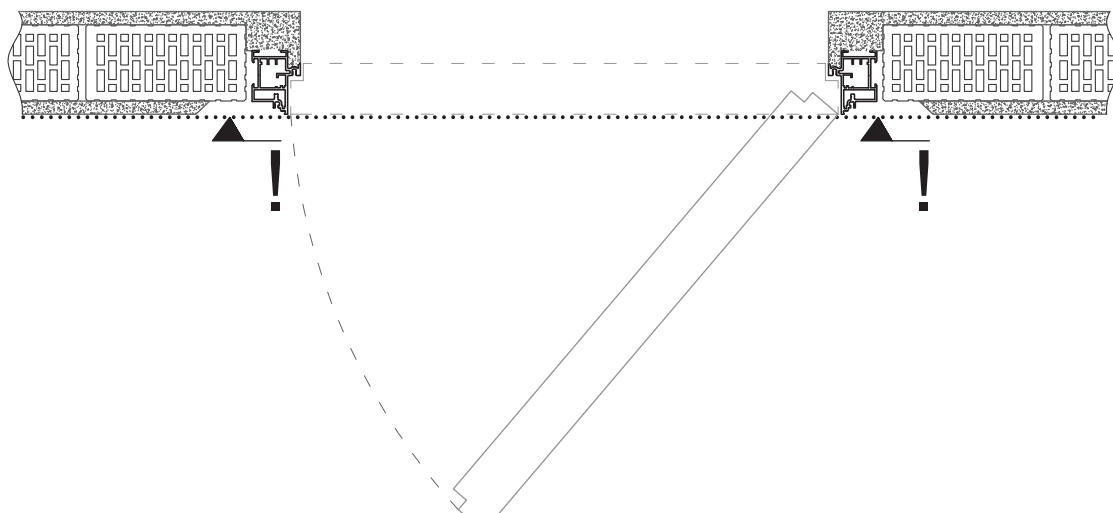


[ 10a ]

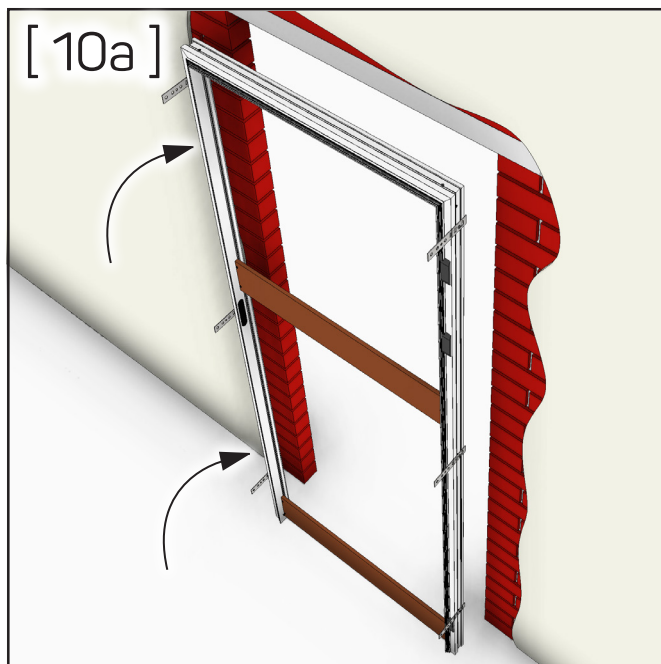


[ 10b ]

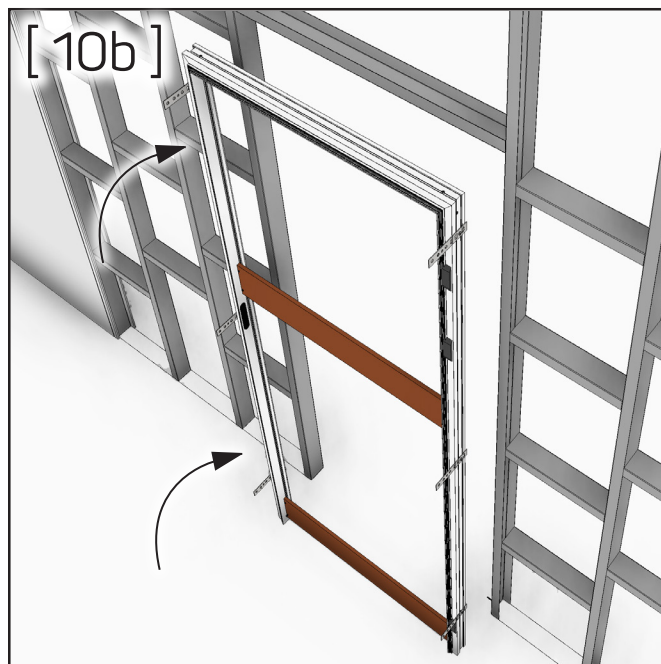


[ 11a ]

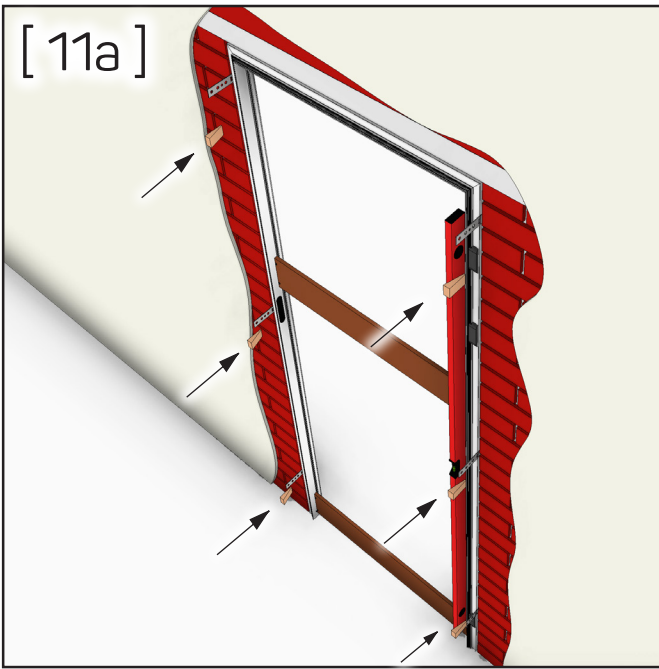


[ 11b ]

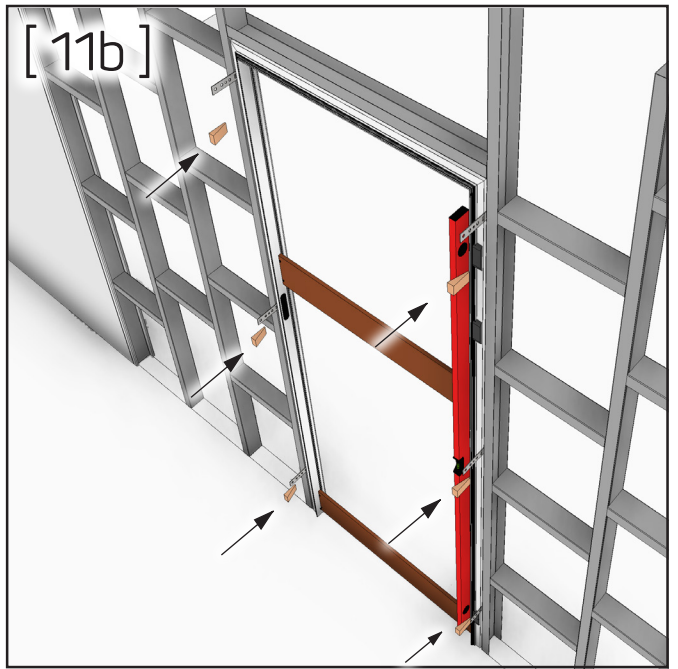


[ 12a ]

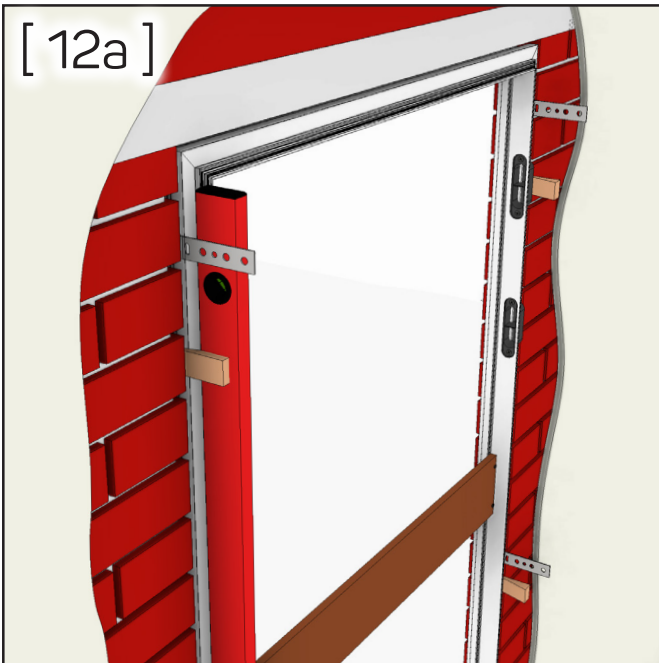


[ 12b ]





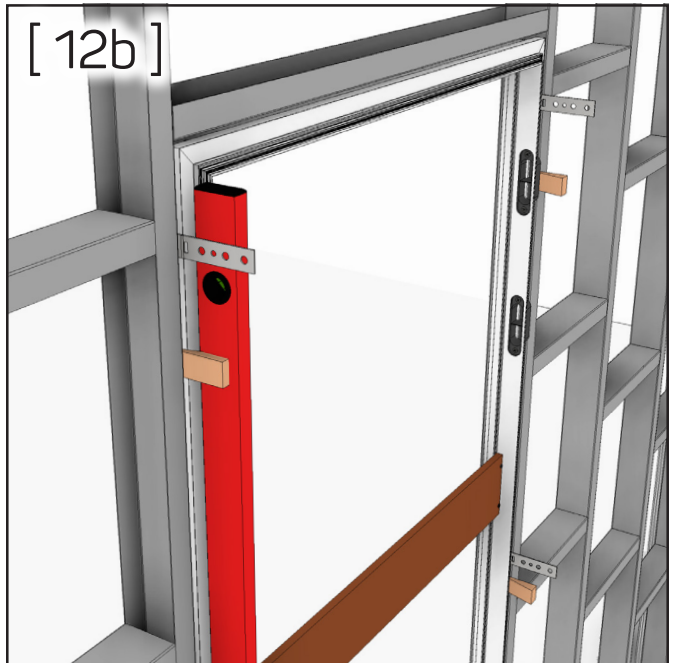


[ 13a ]

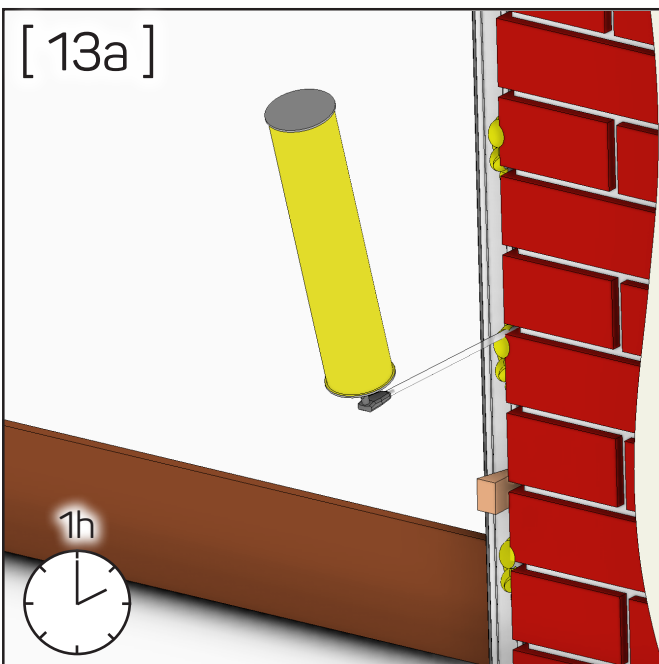


[ 13b ]

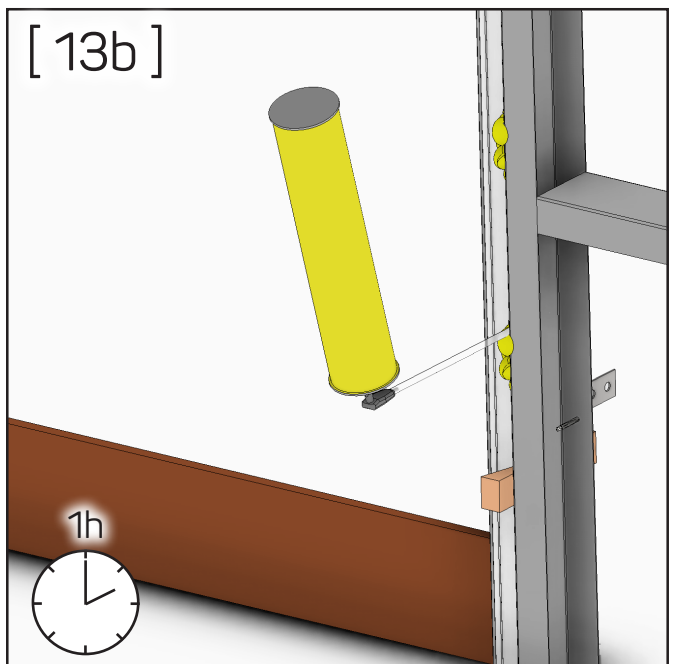

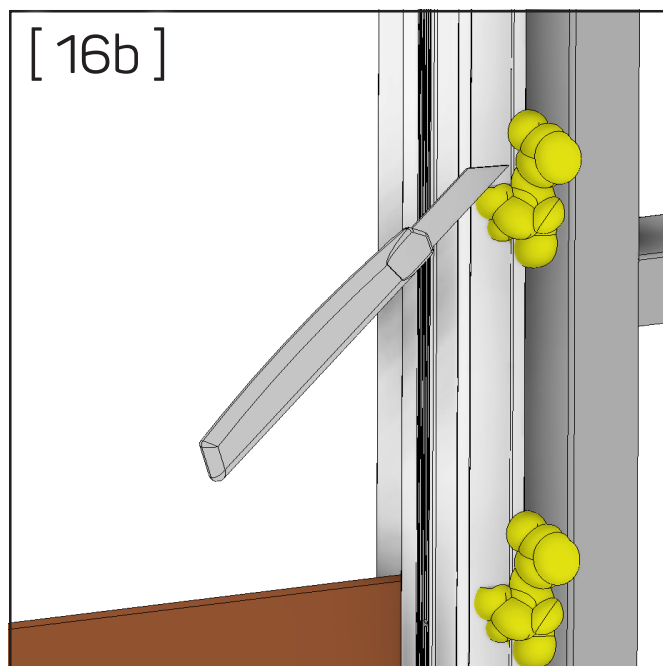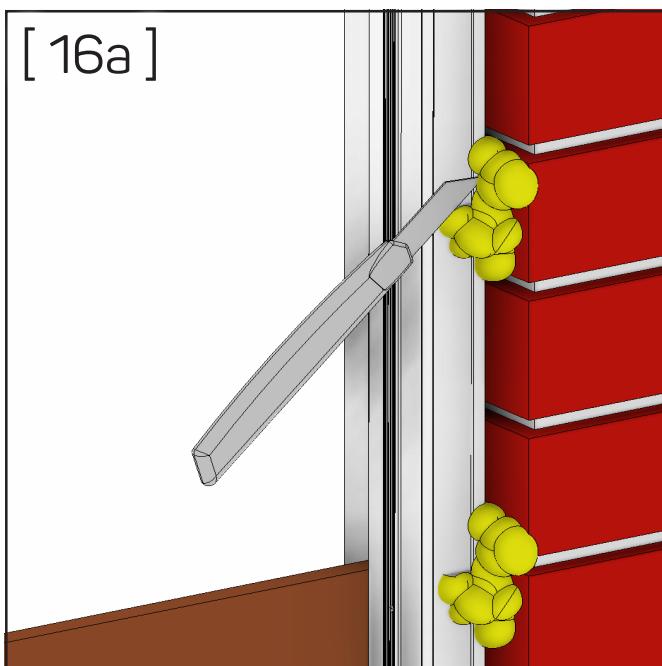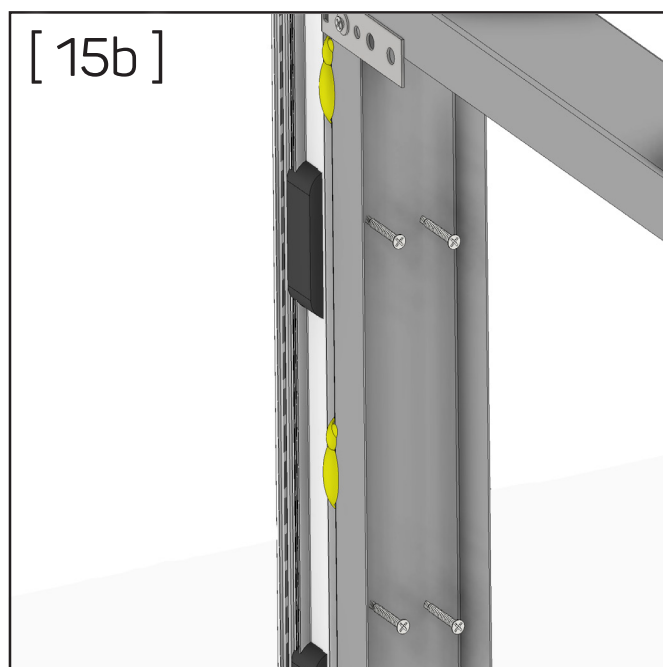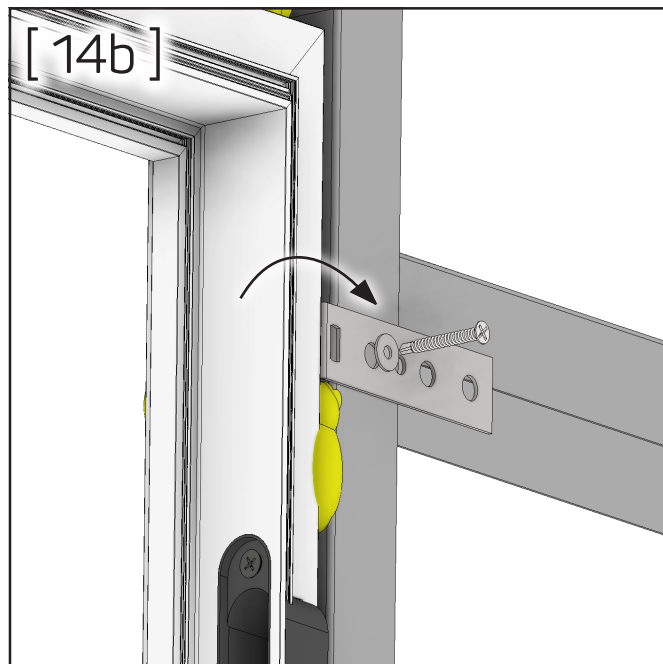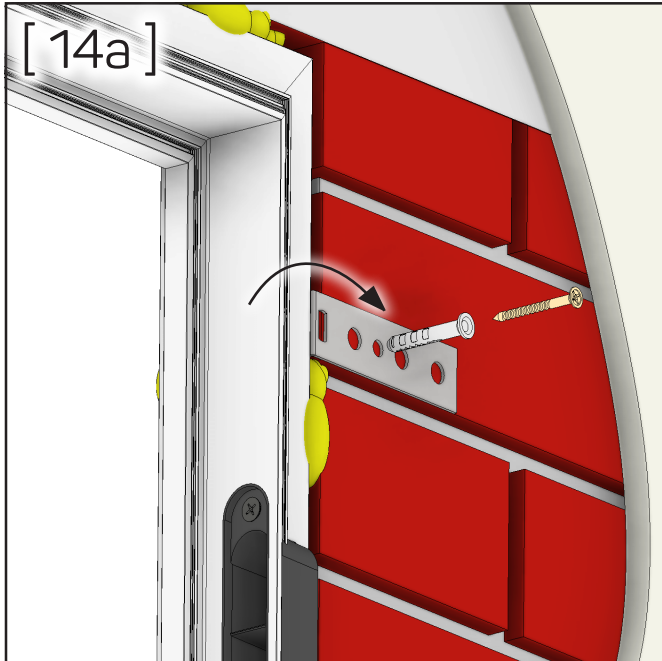





[ 17a ]

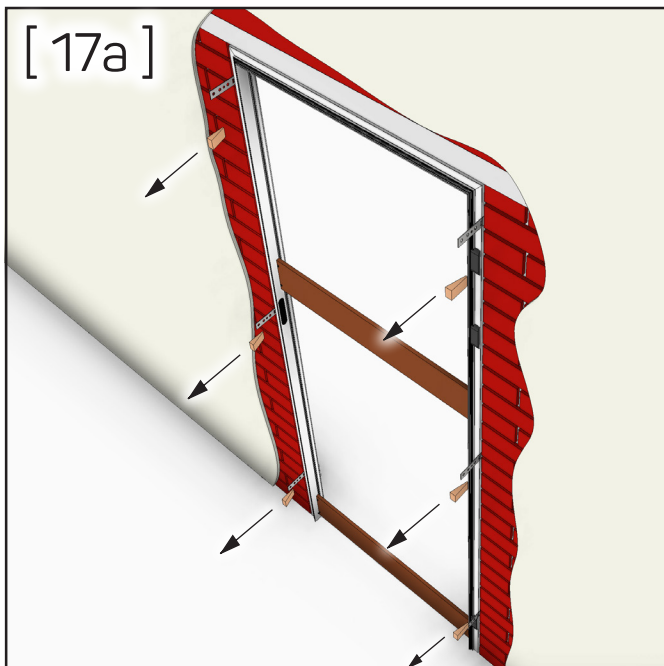


[ 17b ]

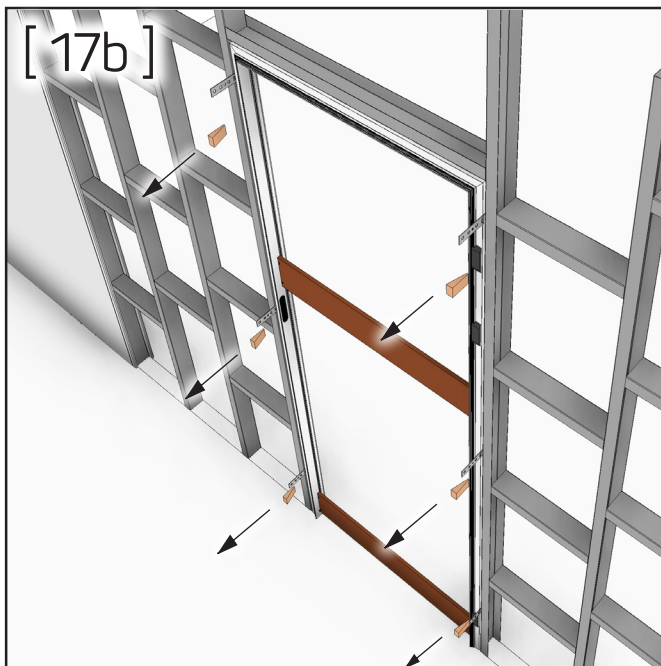


[ 18b ]

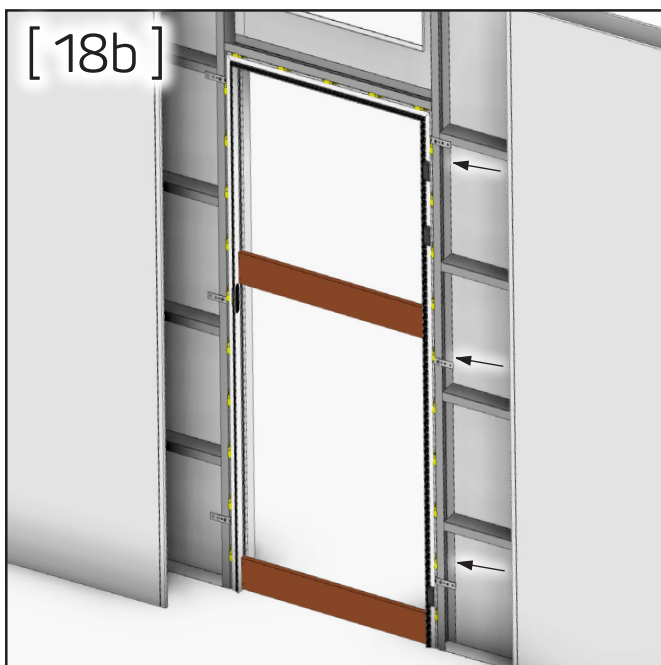


[ 19a ]

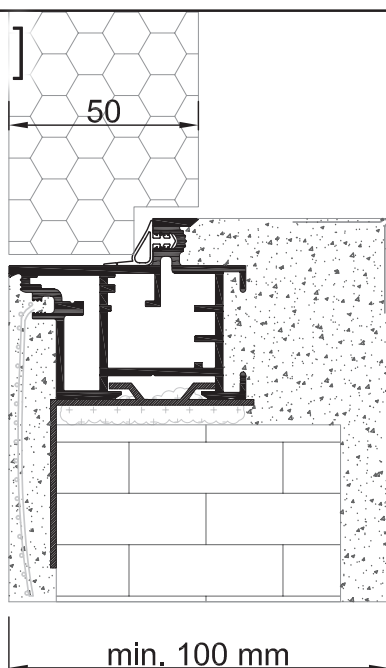


[ 19b ]

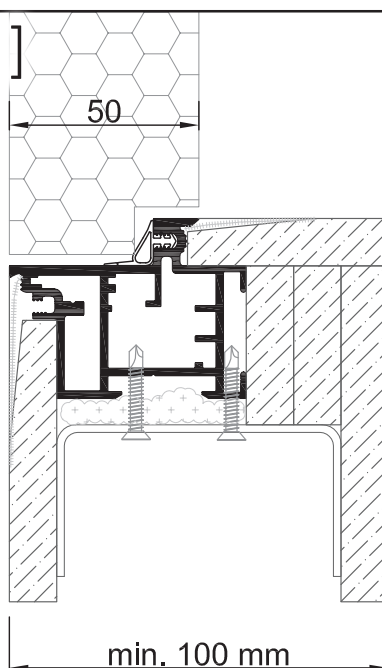


[ 20a ]

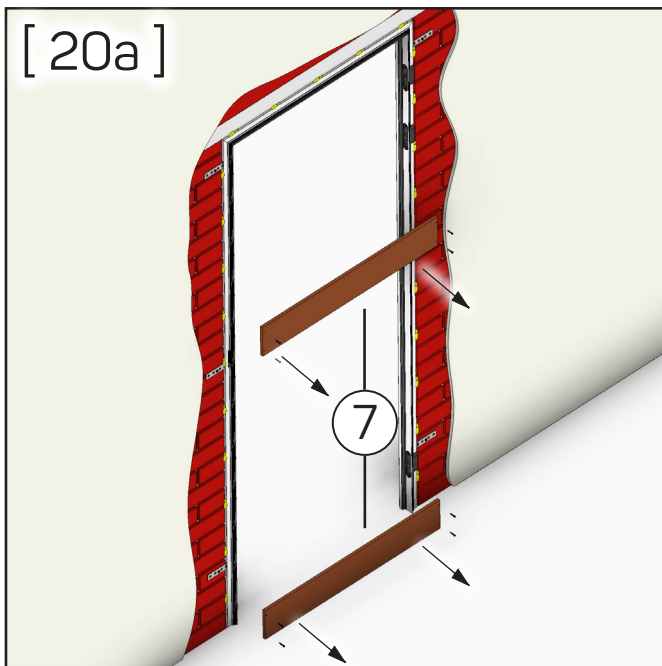


[ 20b ]

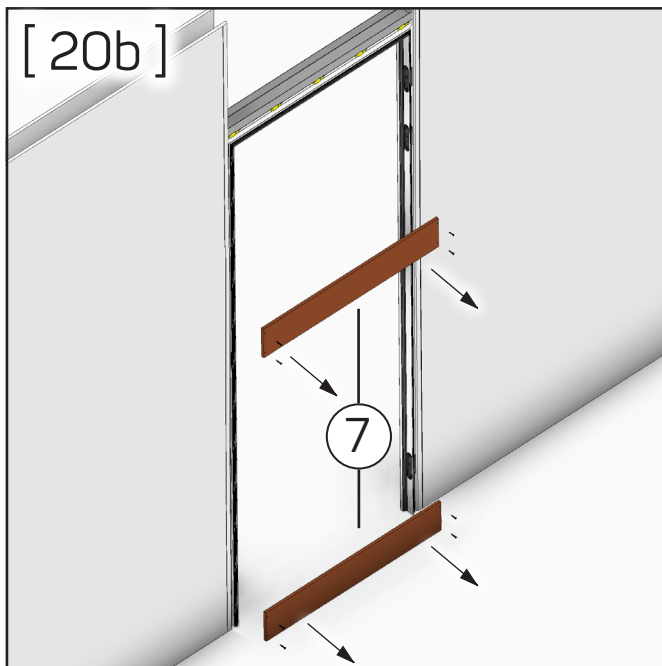


[ 21a ]

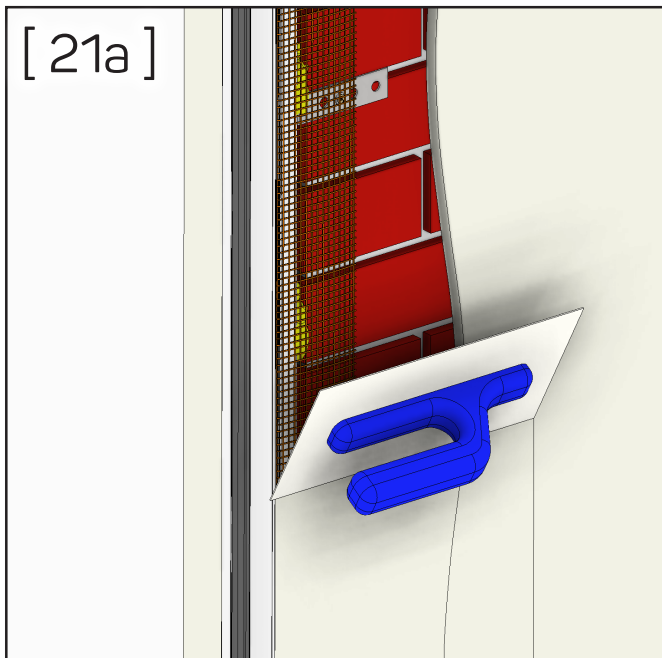


[ 21b ]

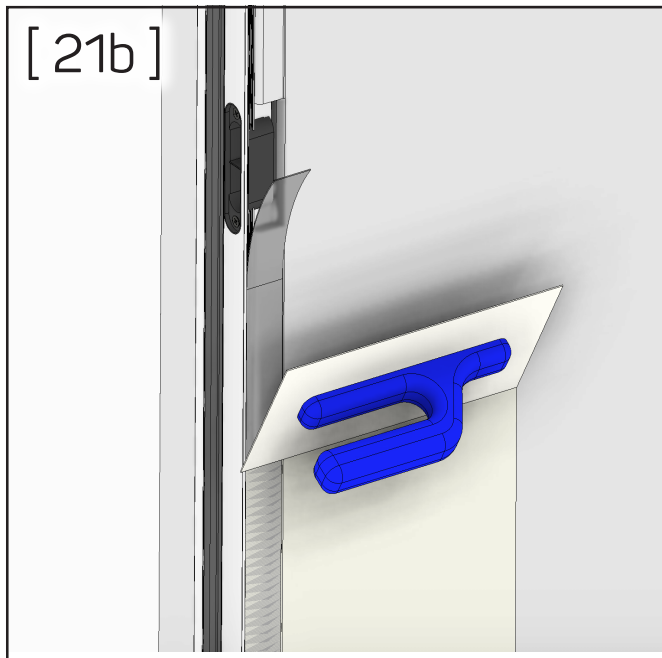


[ 22 ]

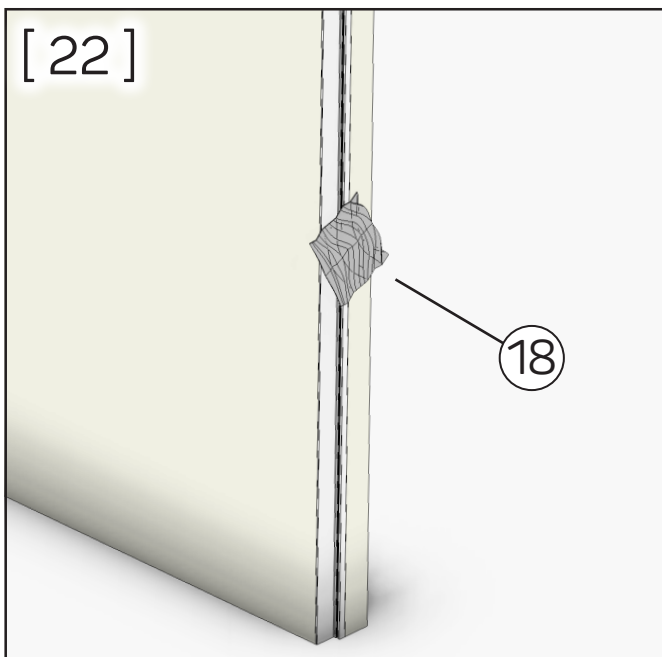


[ 23 ]

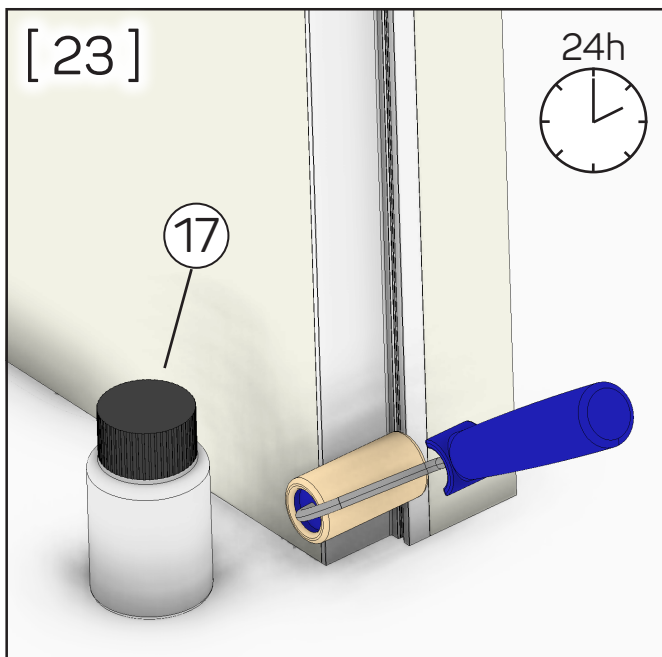


[ 24 ]

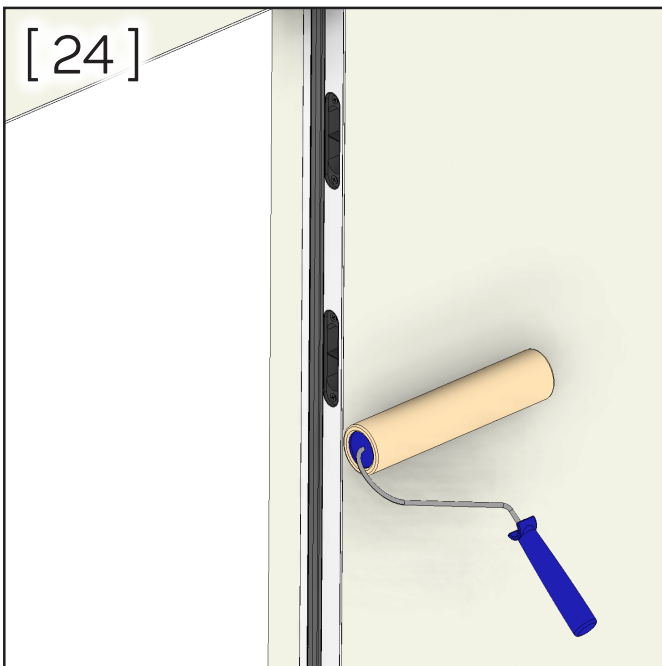


[ 25 ]

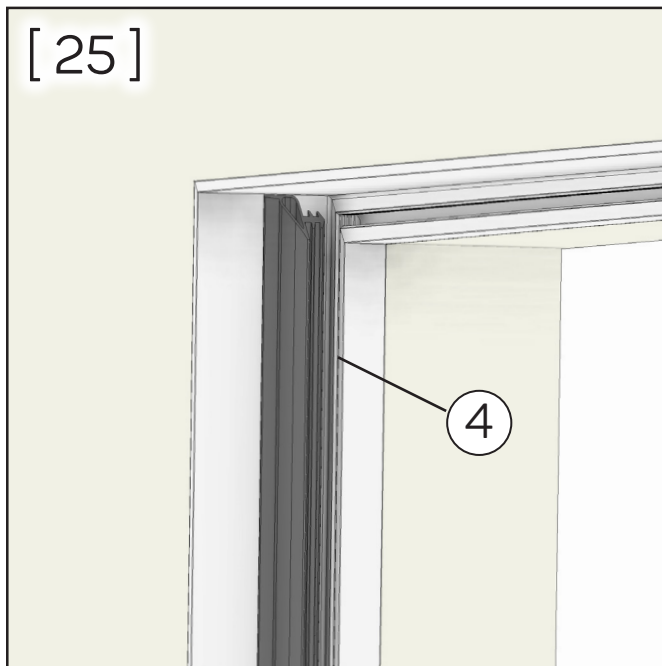


[ 26 ]

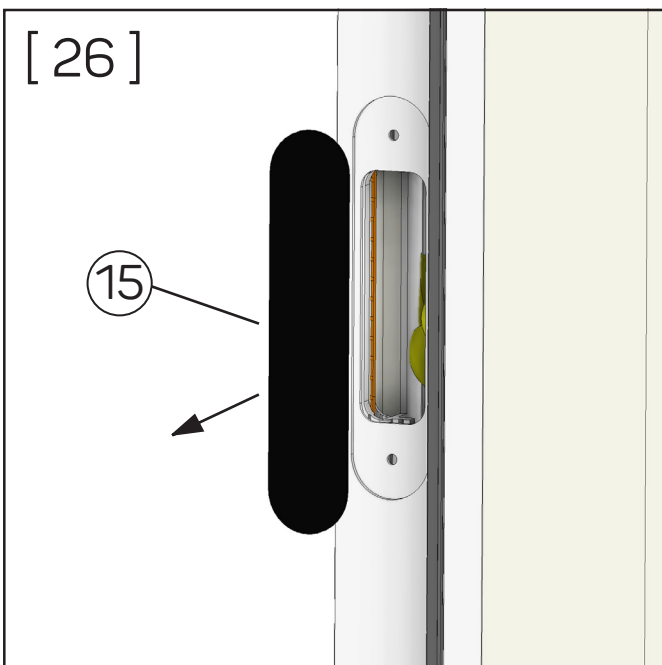


[ 27 ]

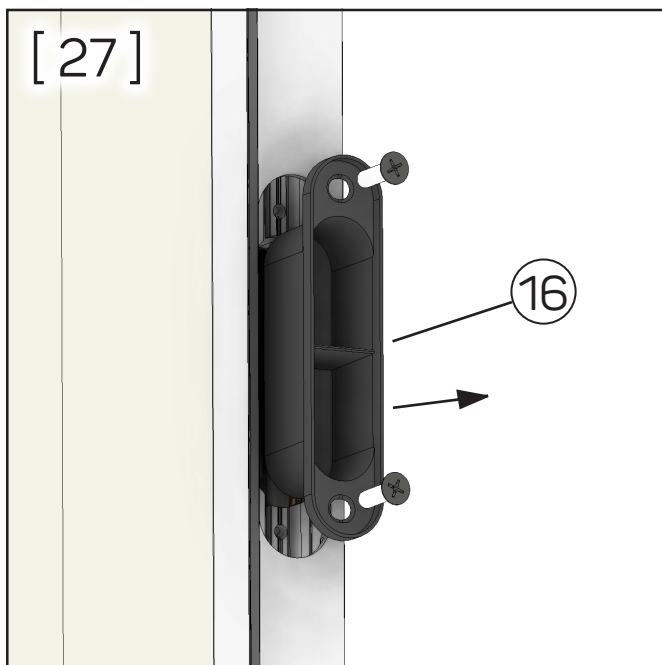


[ 28 ]

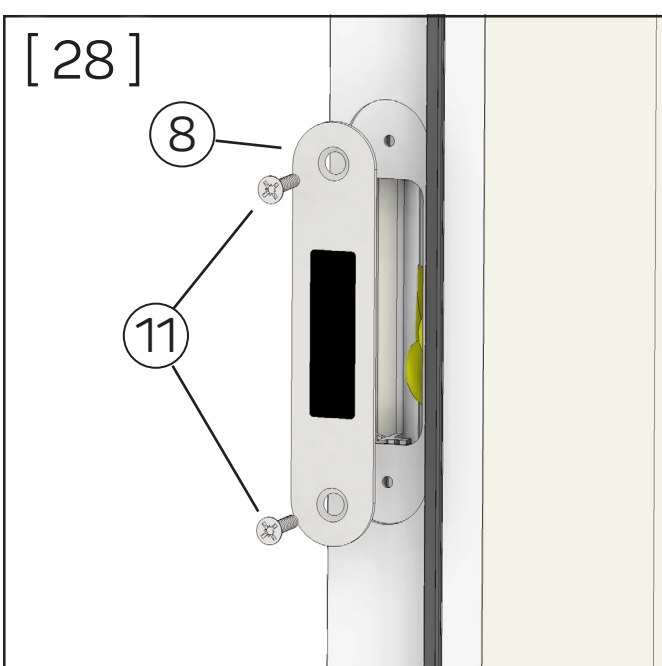


[ 29 ]

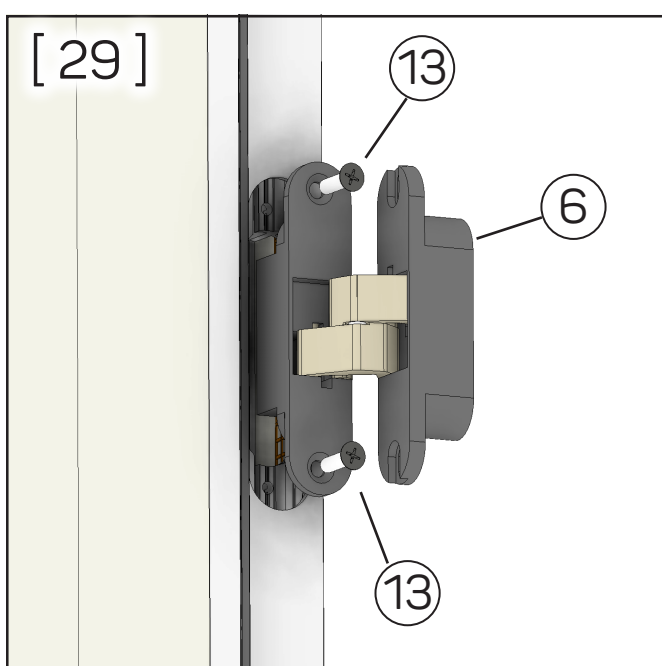


[ 30 ]

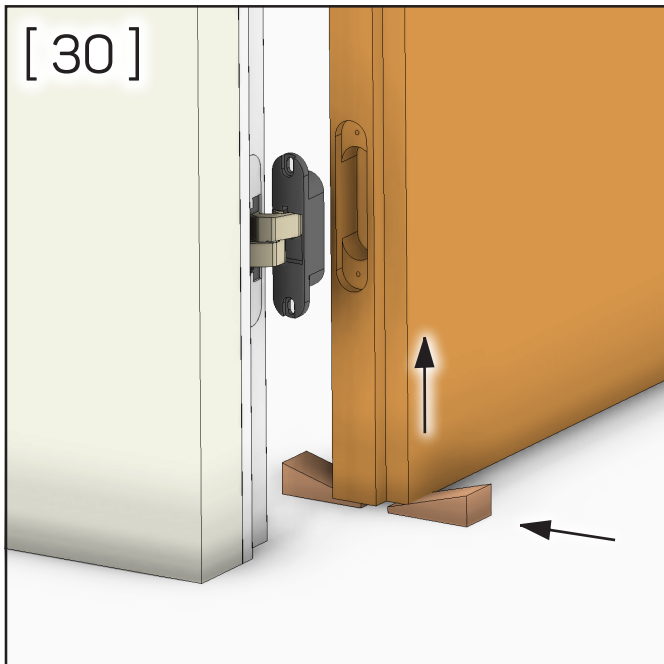


[ 31 ]

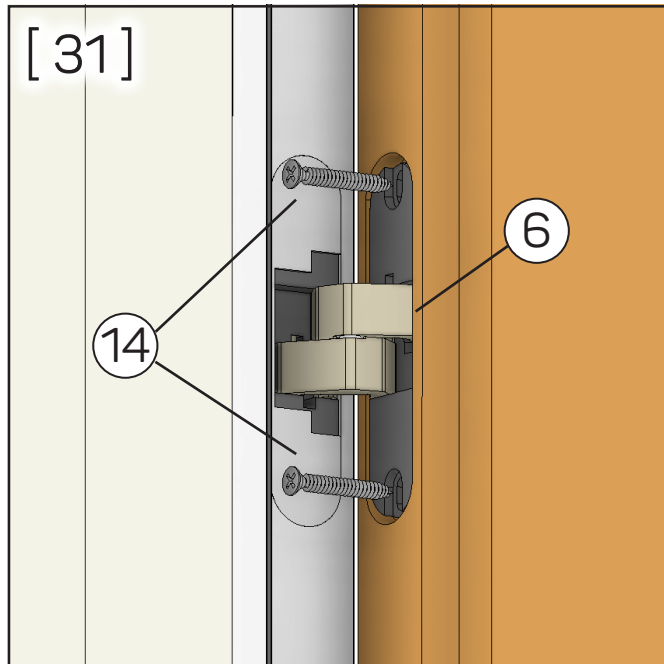


[ 32 ]

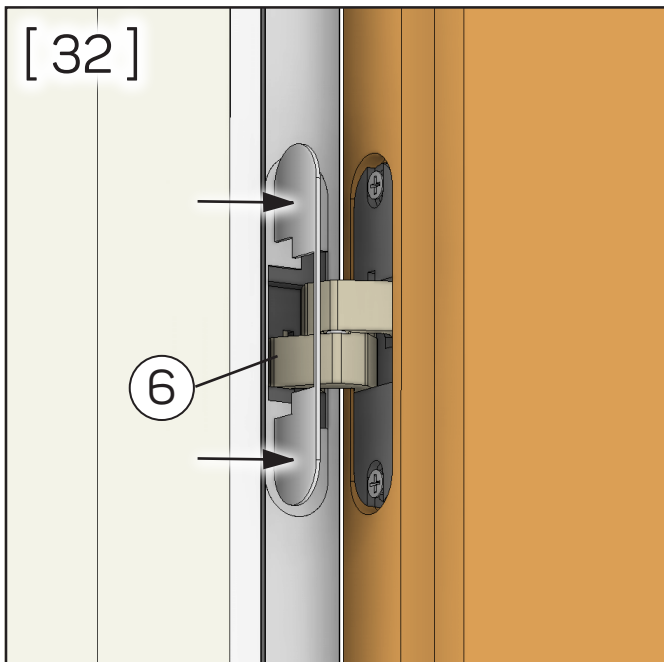

[ 33 ]

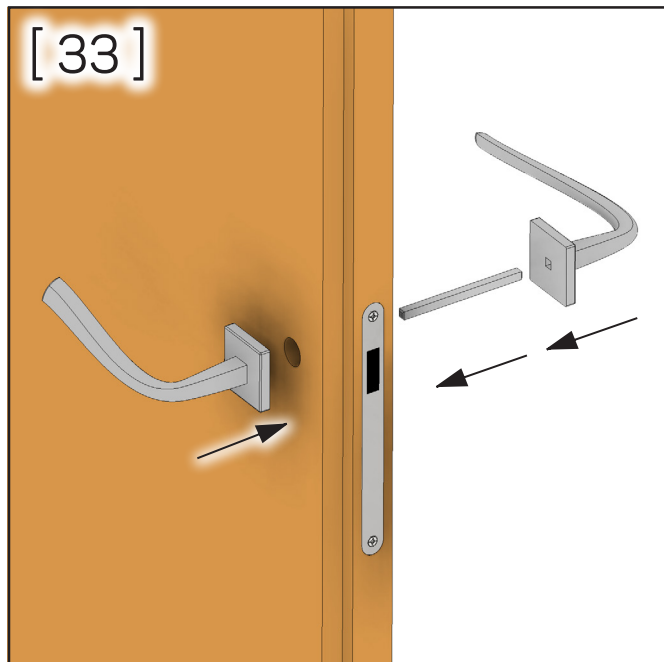


[ 34 ]

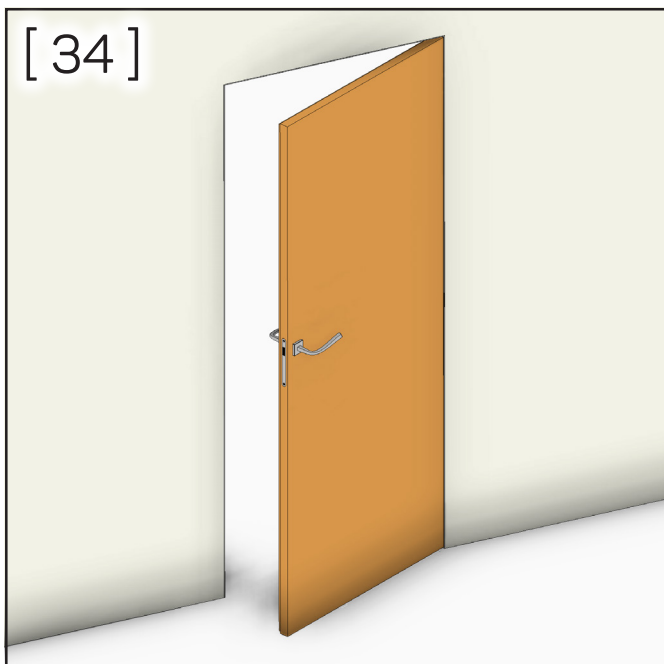





## Adjustment instruction of standard used hinges

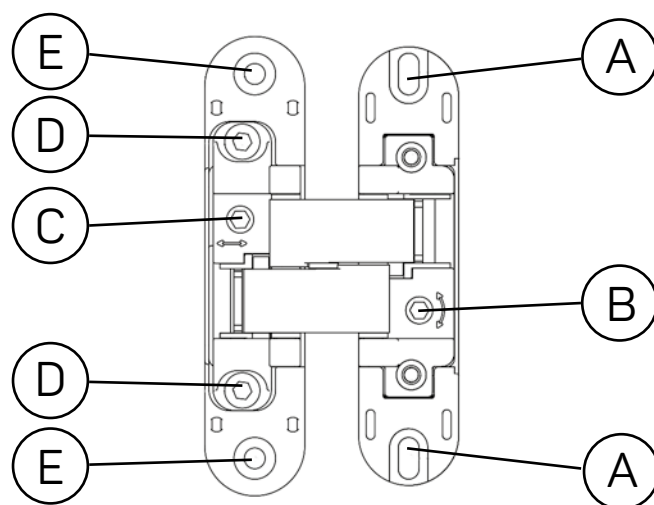


- A - Oval opening that serves for fastening the hinge to the leaf and for adjusting it up and down (making the top gap even)
- B - Bolt for hinge adjustment right and left (making leaf's side gaps even)
- C - Bolt for hinge adjustment front and back (making the leaf flush with wall surface)
- D - Bolt serving for unlocking/locking the position set by C bolt
- E - Round opening that serves for fastening the hinge to the door frame

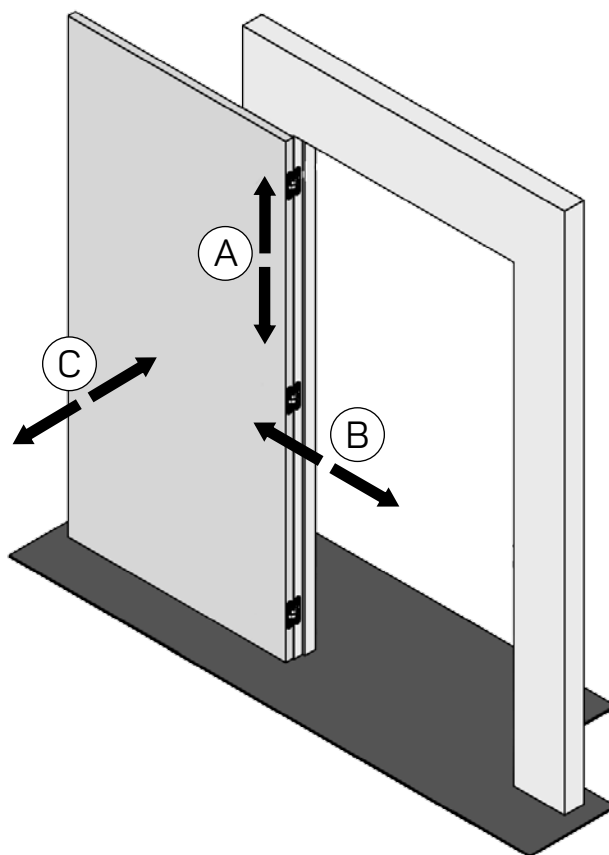

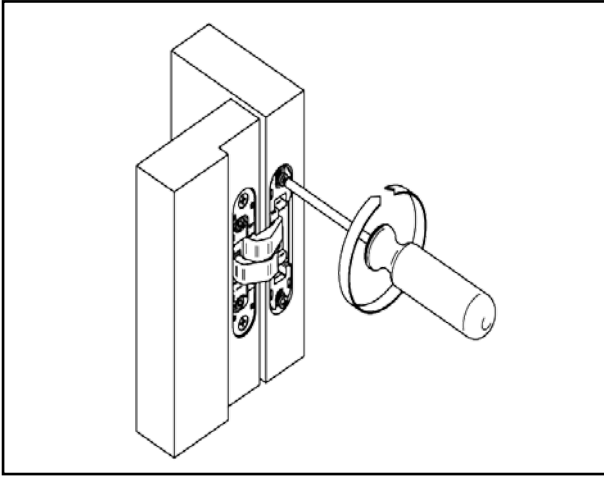


1. In order to adjust the leaf height (decrease or increase the top gap), loosen screws in openings [A] that hold all hinges in the leaf.

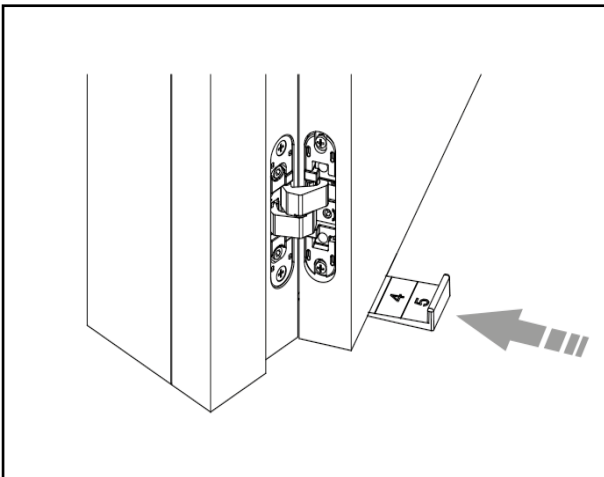


2. Using a wedge (an adjustment washer for doors), lift the door to the desired height in such a way that the gap between the door frame and the leaf is about **3 mm**. Then tighten all hinges to the leaf.


The range of hinge adjustment is **5 mm** from its lowest position.

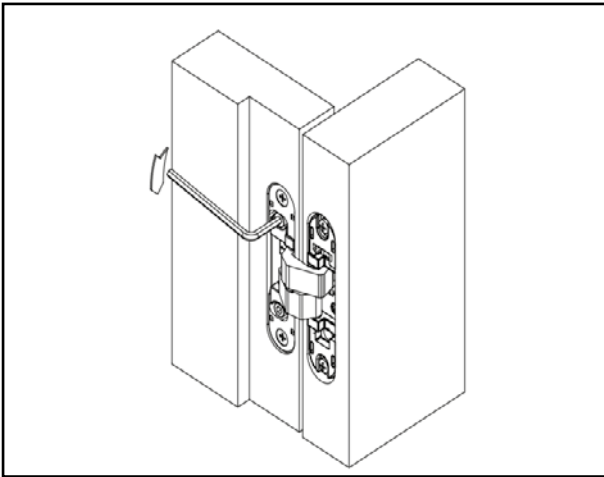


3. In order to adjust the leaf so that its surface is flush with the wall surface, first loosen [D] bolts.

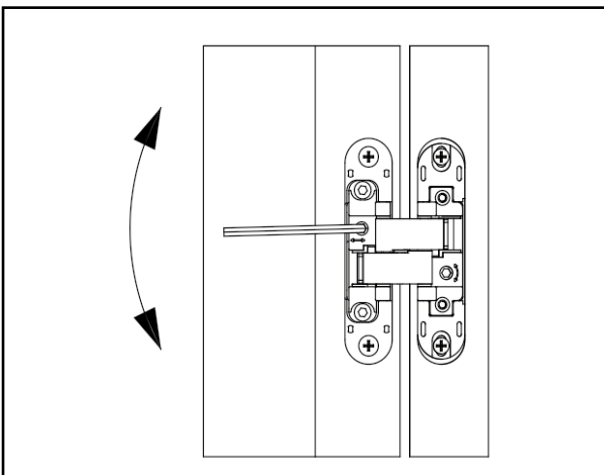


4. Then move the leaf closer to or farther from the door frame by rotating [C] bolt. After adjusting the hinges in this plane appropriately, again tighten [D] bolts to lock the position.

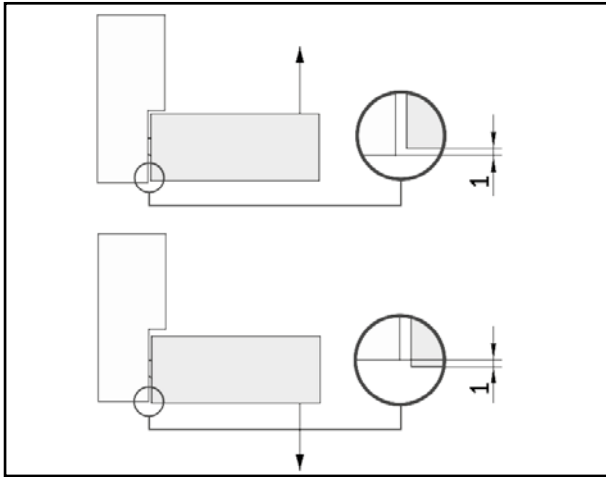

The range of hinge adjustment in this plane is **+/-1 mm.**

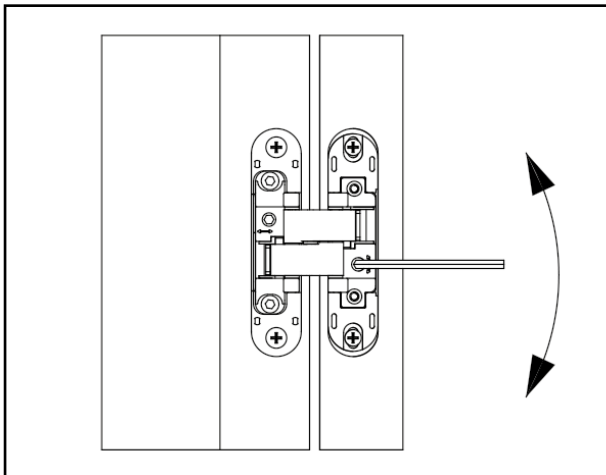

5. In order to adjust the gaps between the leaf and the door frame on the sides, tighten or loosen [B] bolt in the hinge, which makes the leaf move right or left.

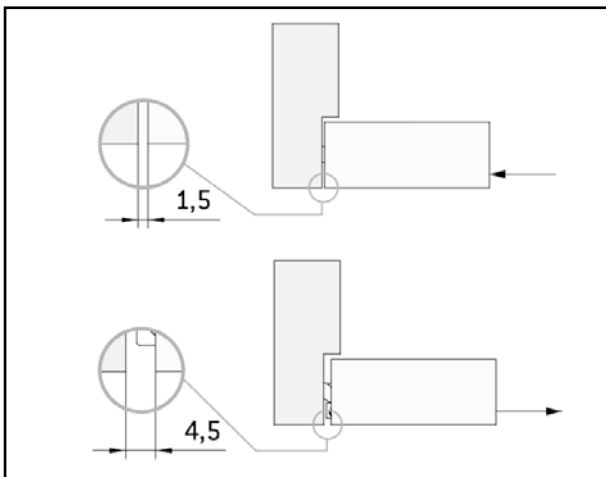

The range of hinge adjustment in this plane is **+/-1.5 mm.**

Adjust all hinges evenly so that none of them is overloaded, which will prevent their damage.

