




Assembly instruction


B02







cassette with concealed door frame for
125 mm drywall double





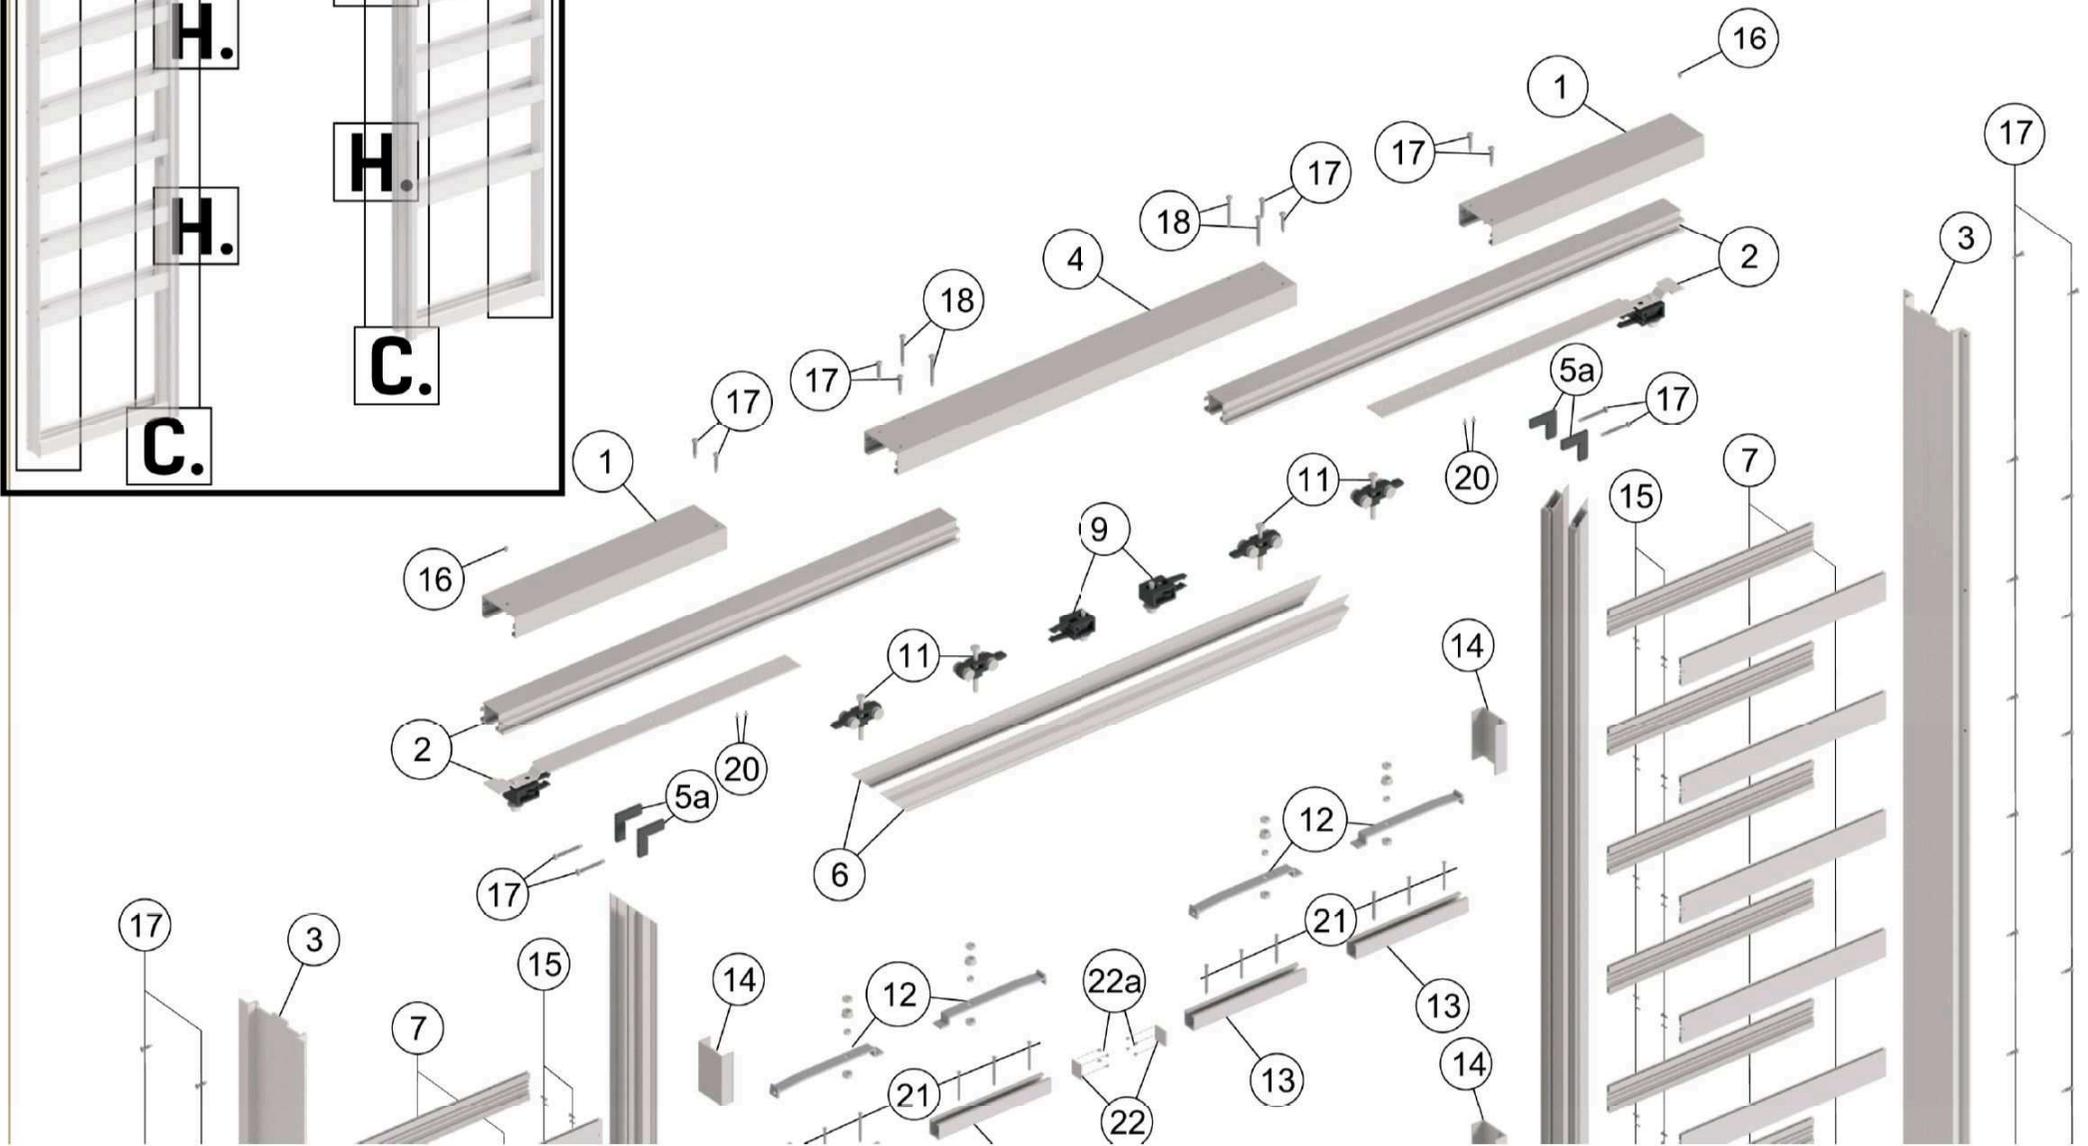


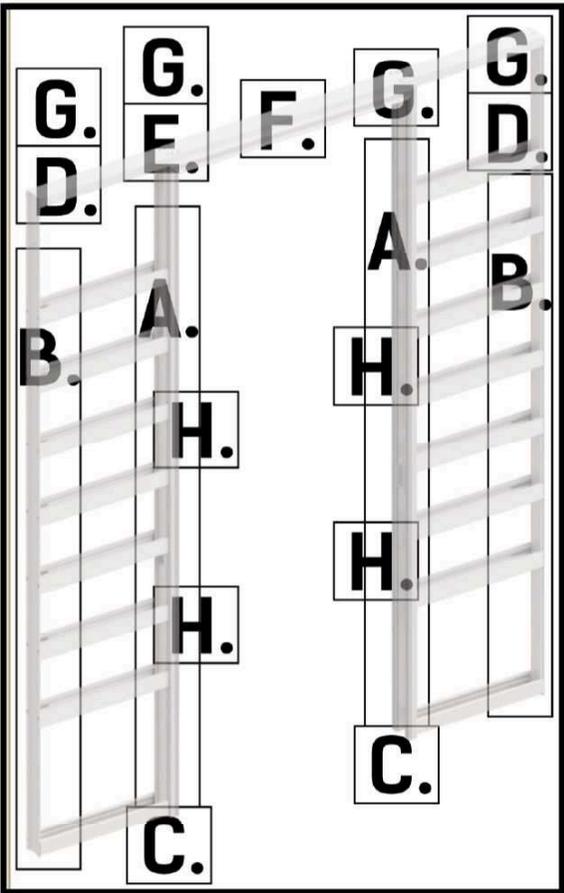




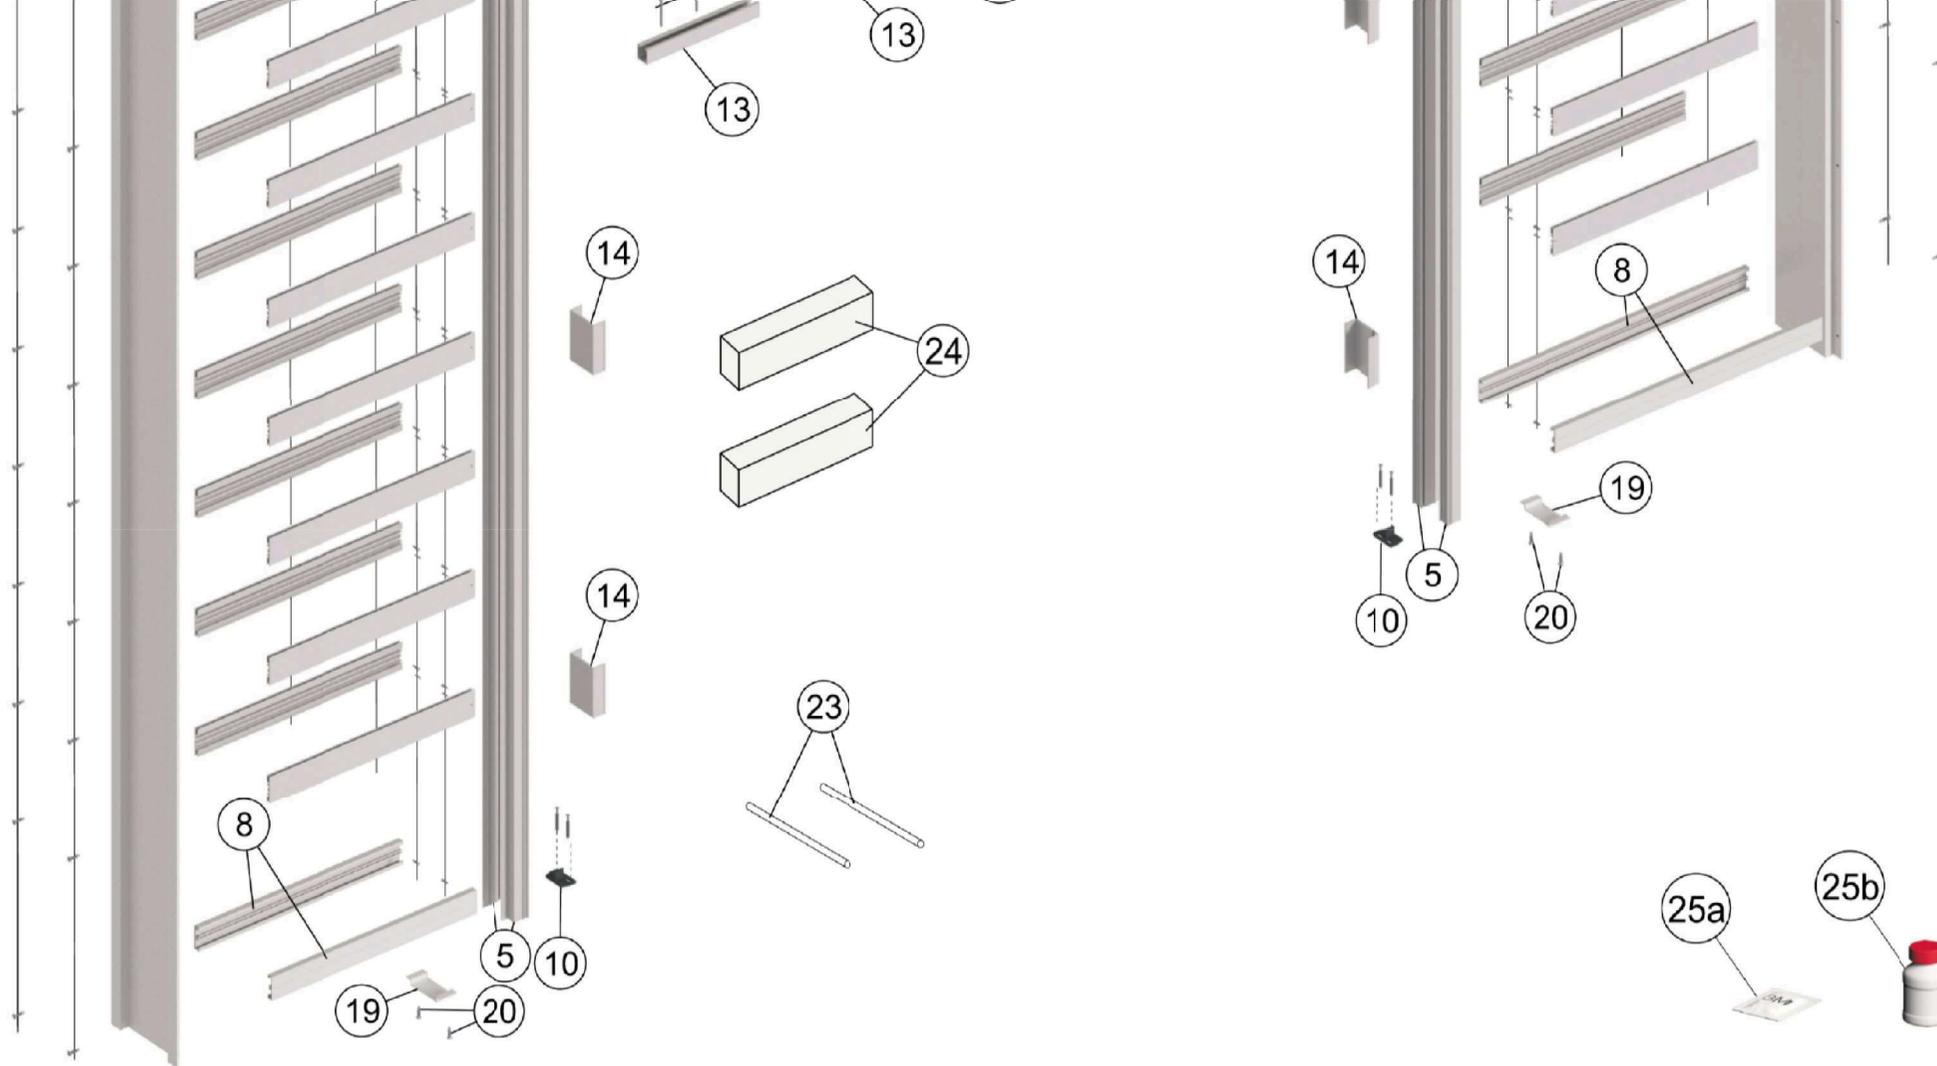




①	 x 2	⑨	 x 2	⑰	 \varnothing 3,9x18 min. x 40	⑳	 a.  x 2 b. x 1
②	 +  x 2	⑩	 x 2 +  x 8	⑱	 x 4		
③	 x 2	⑪	 +  x 4	⑲	 x 2		
④	 x 1	⑫	 +  +  x 4	⑳	 \varnothing 3,9x9,5 x 8		
⑤	 + a.  x 4	⑬	 x 4	㉑	 \varnothing 5x35 x 12		
⑥	 x 2	⑭	 x 6	㉒	 x 2 a.  2,2x9,5 x 8		
⑦	 min. x 20	⑮	 \varnothing 4,2x9,5 min. x 44	㉓	 \varnothing 4 mm x 2		
⑧	 x 4	⑯	 \varnothing 3,5x9 x 2	㉔	 x 2		

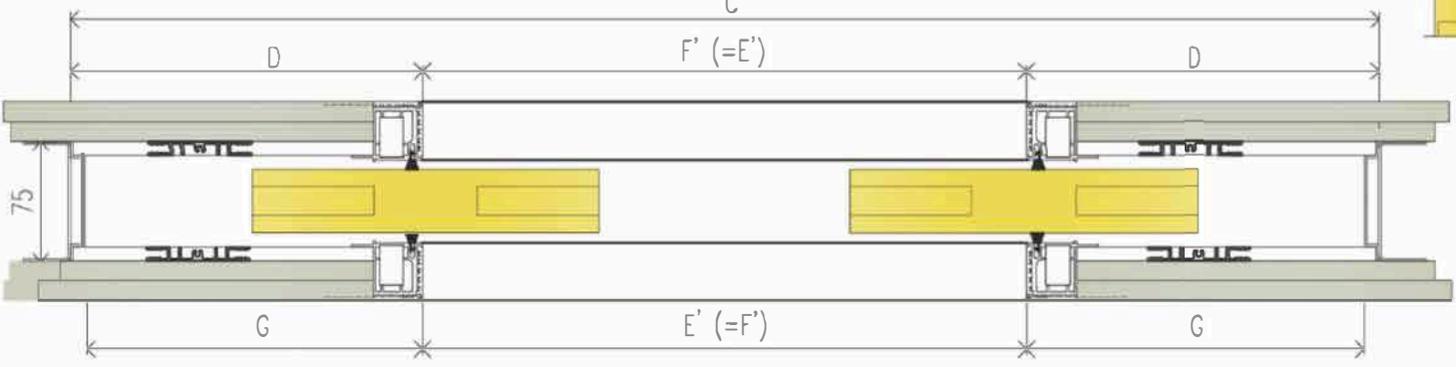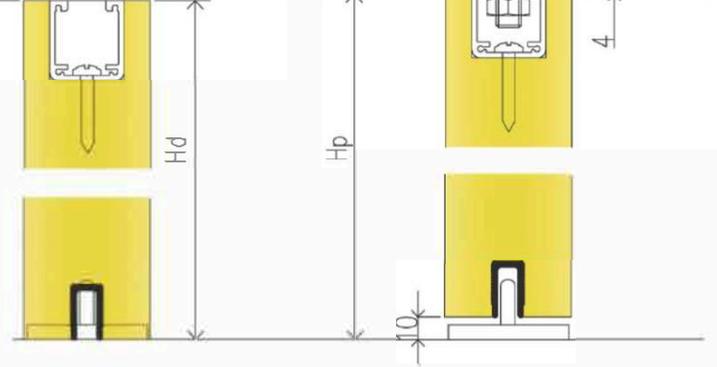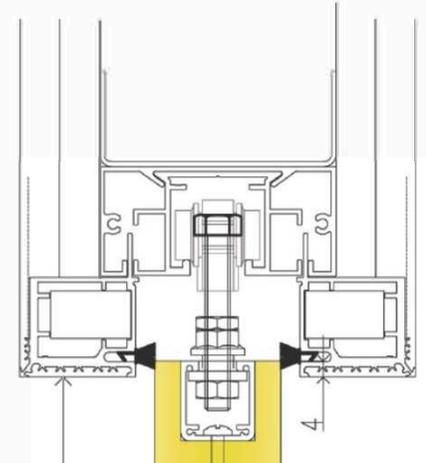
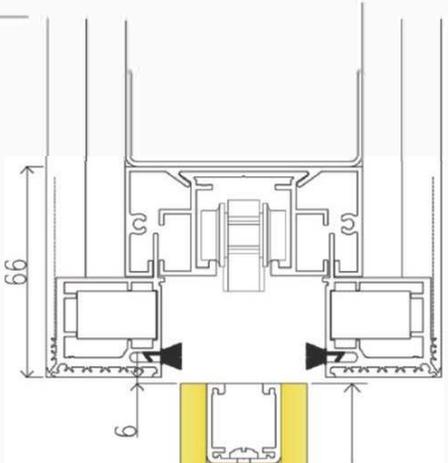
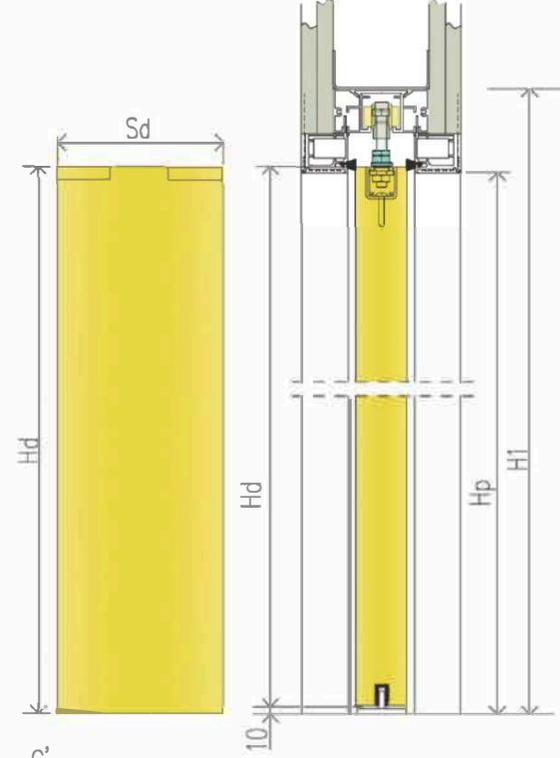
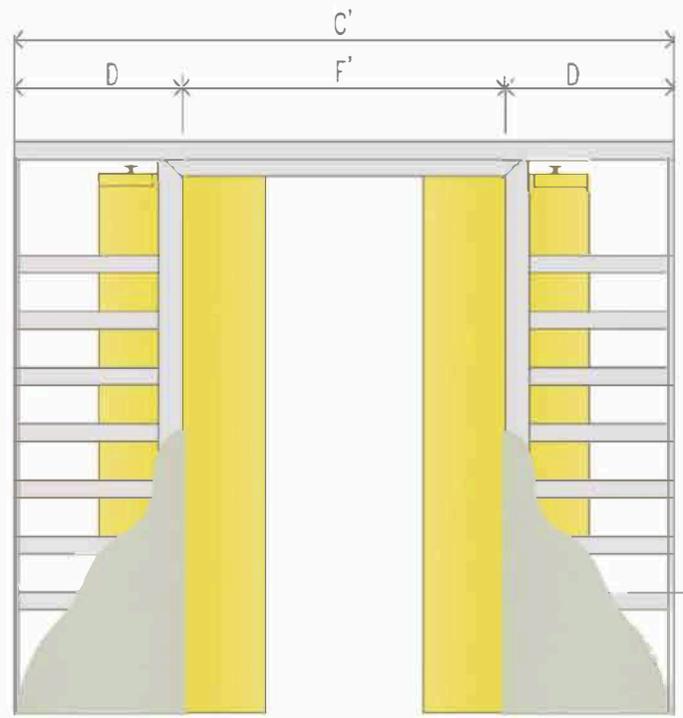


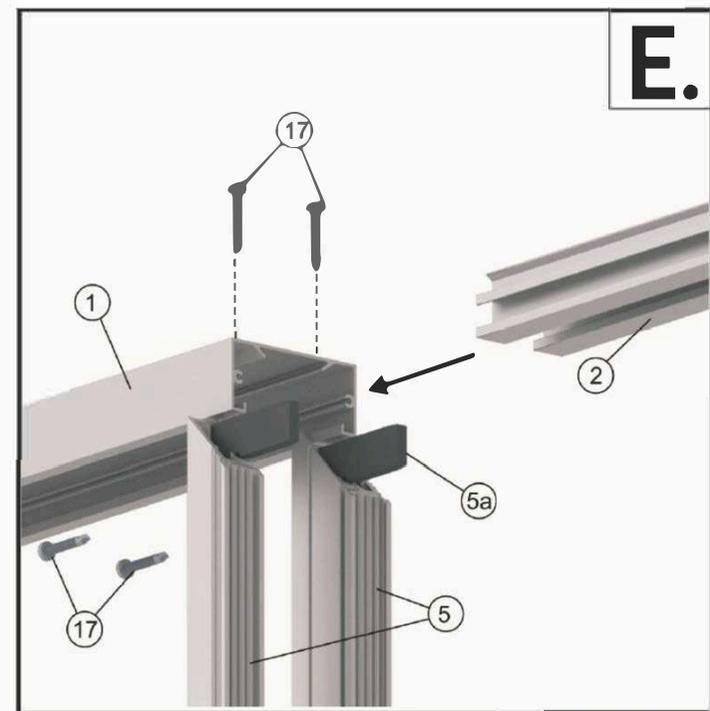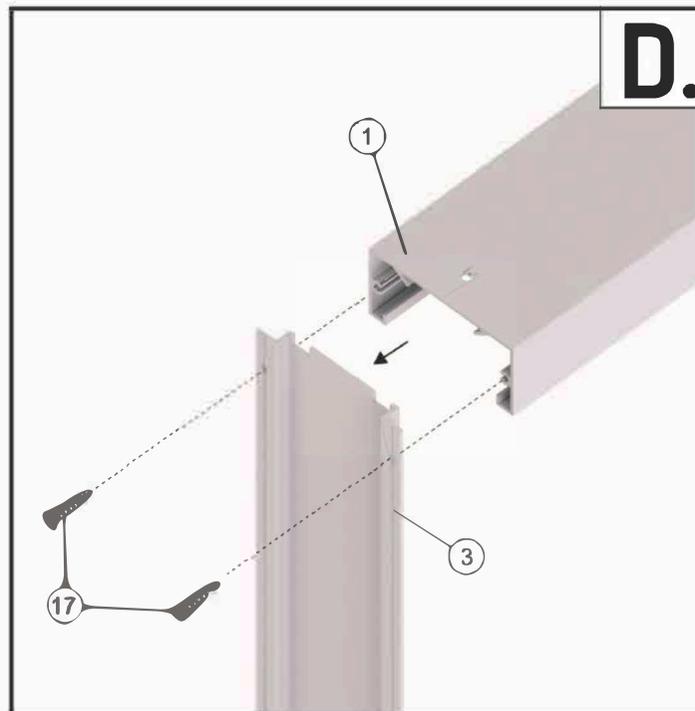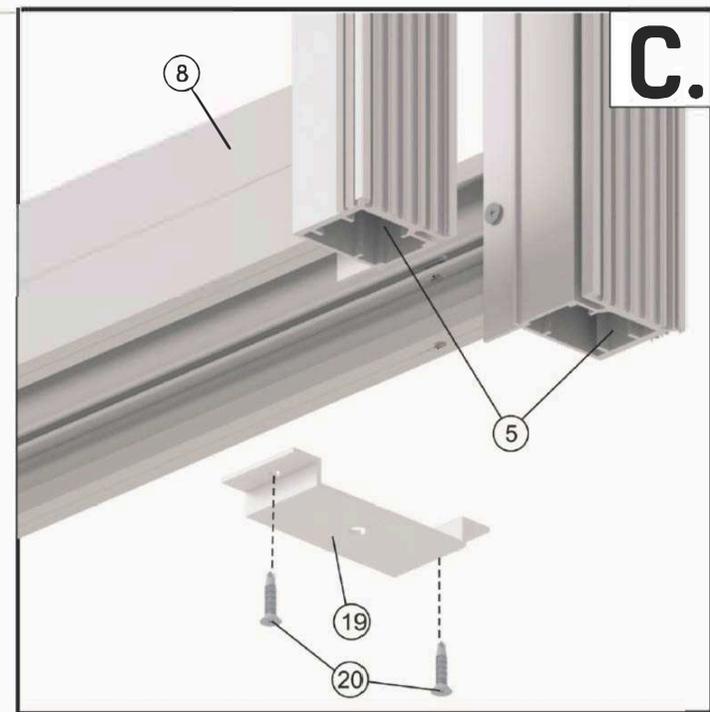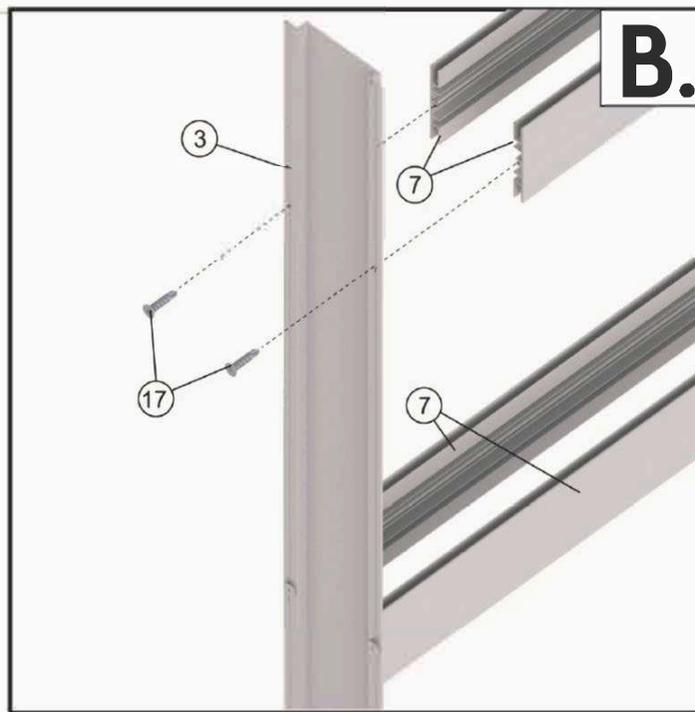
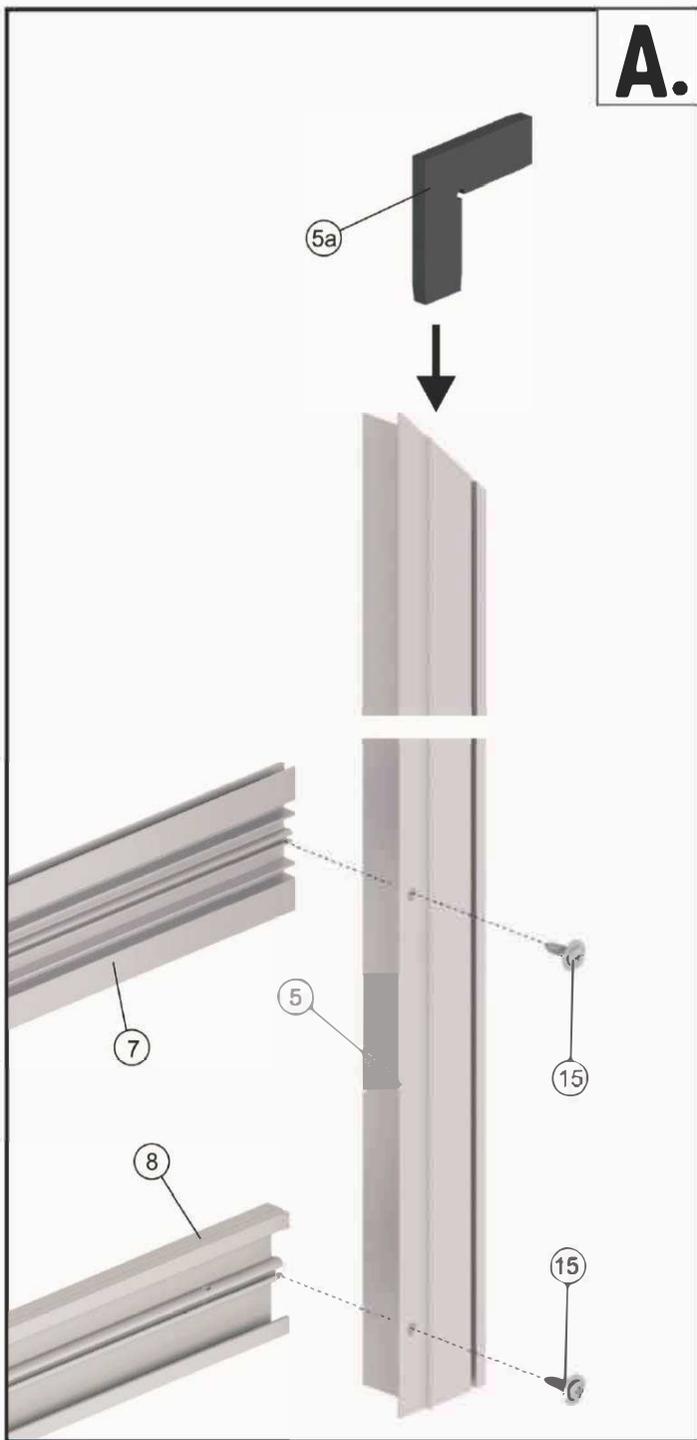


1 Note: Prior to installation, check the tightening of the screws on the slider stopper [2]

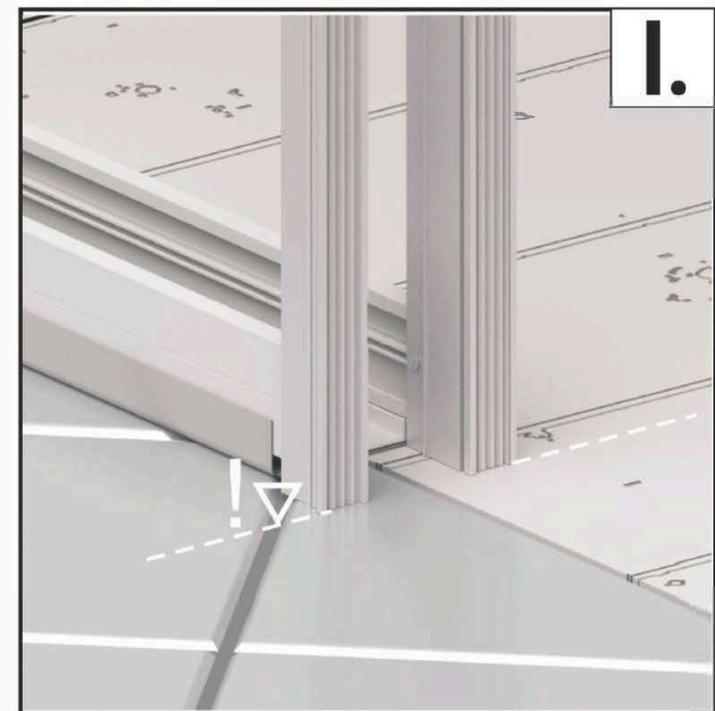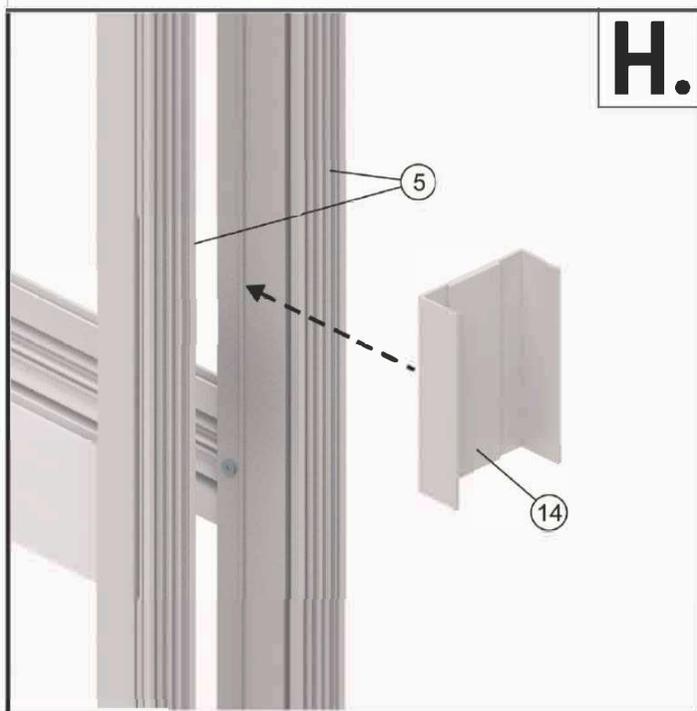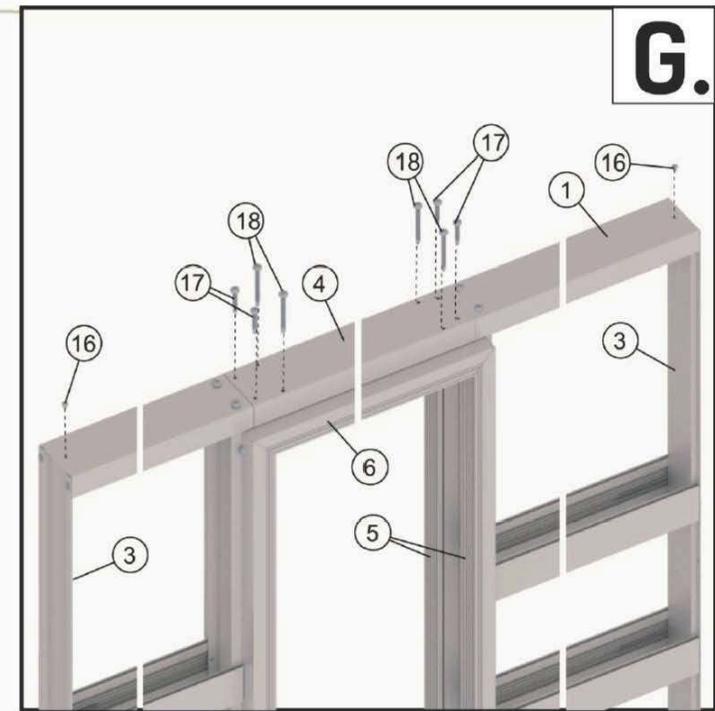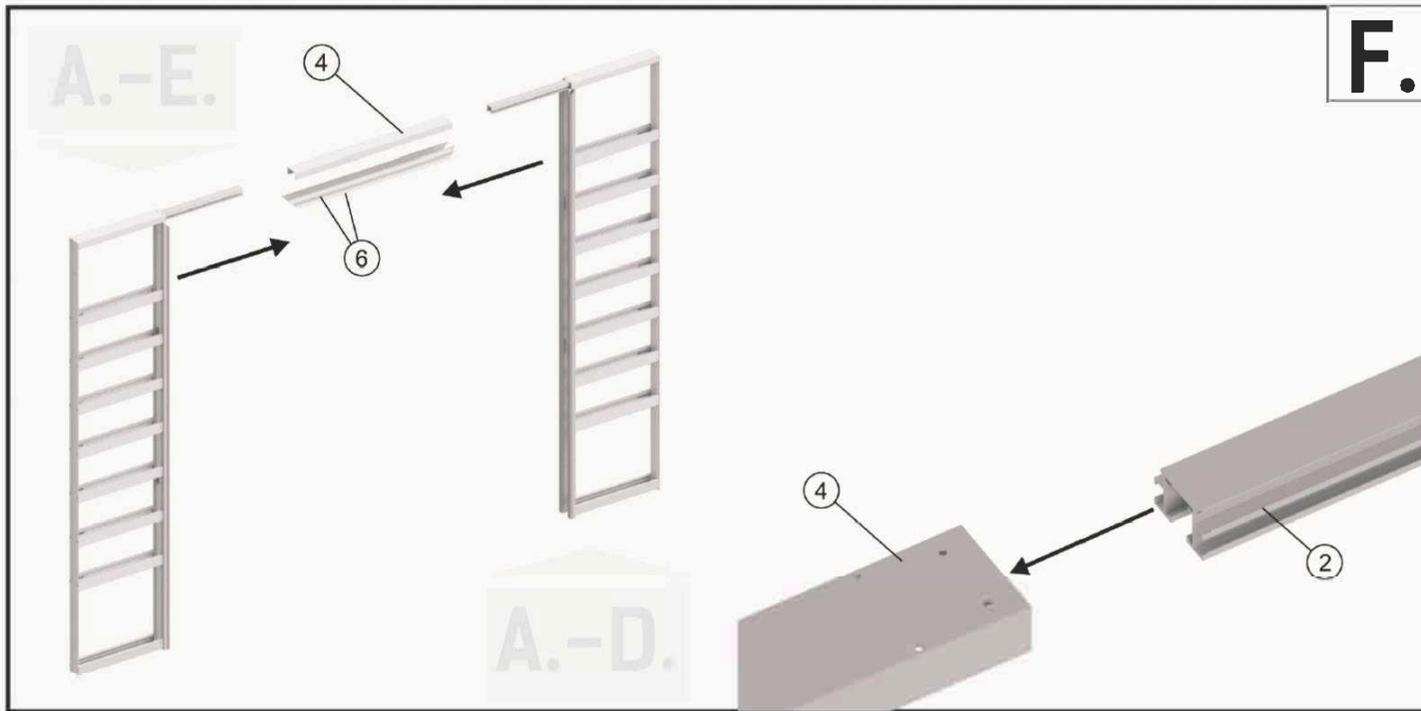

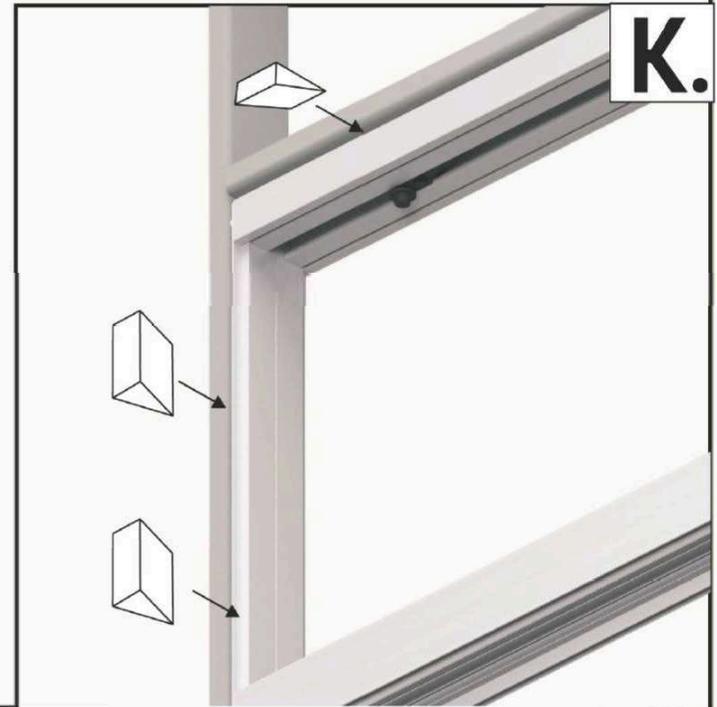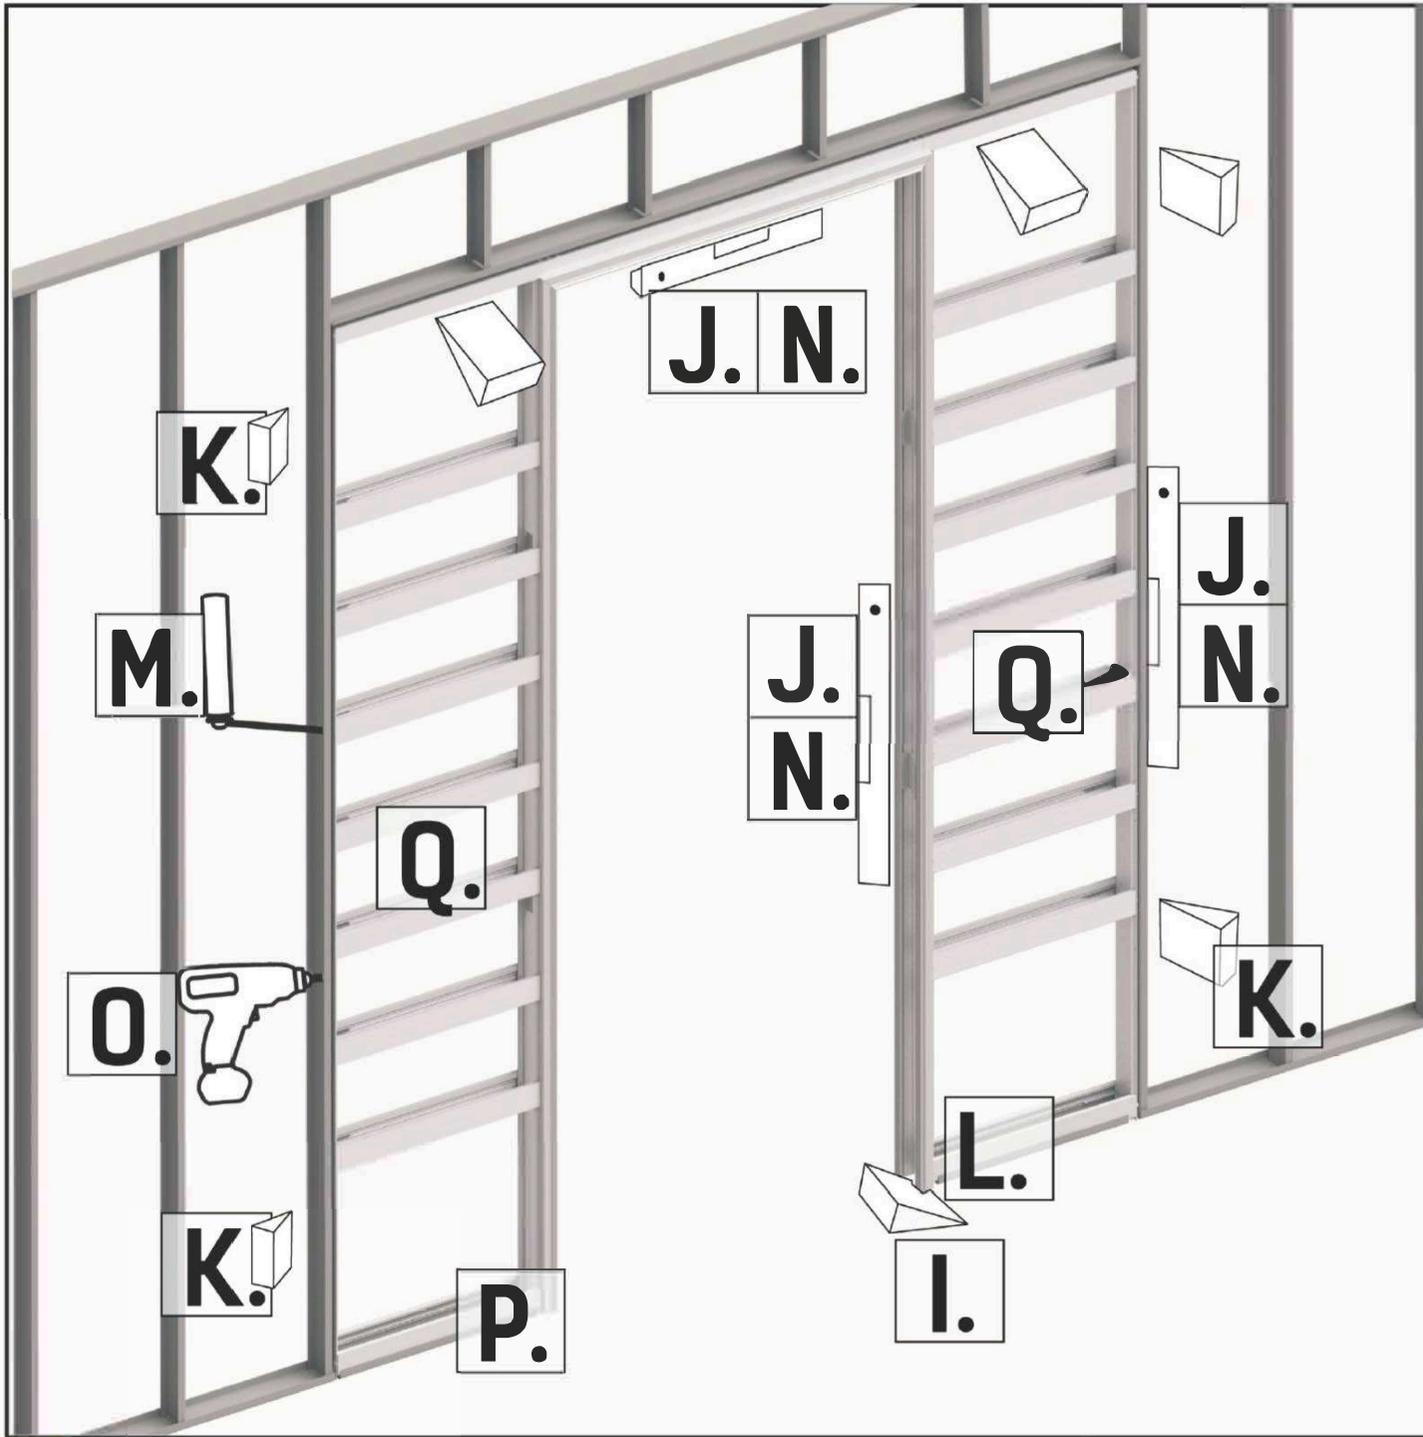

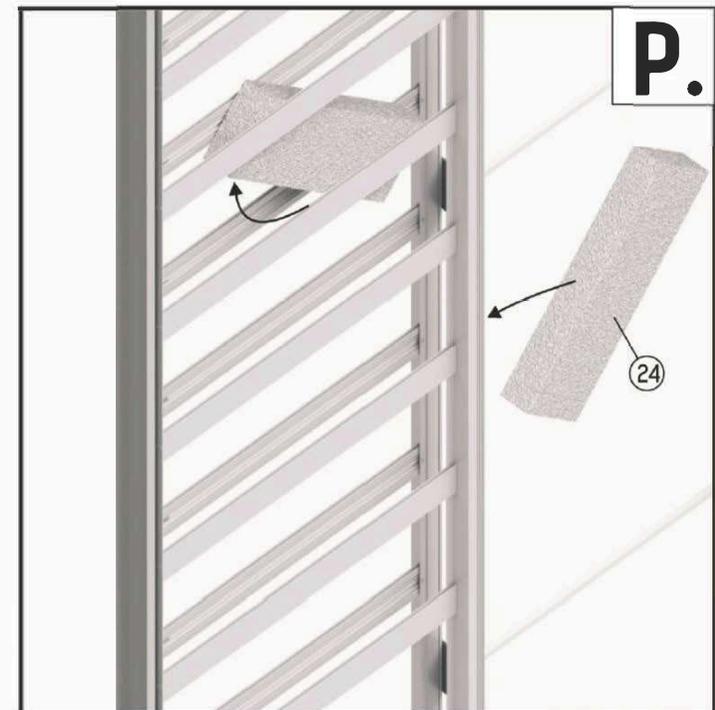
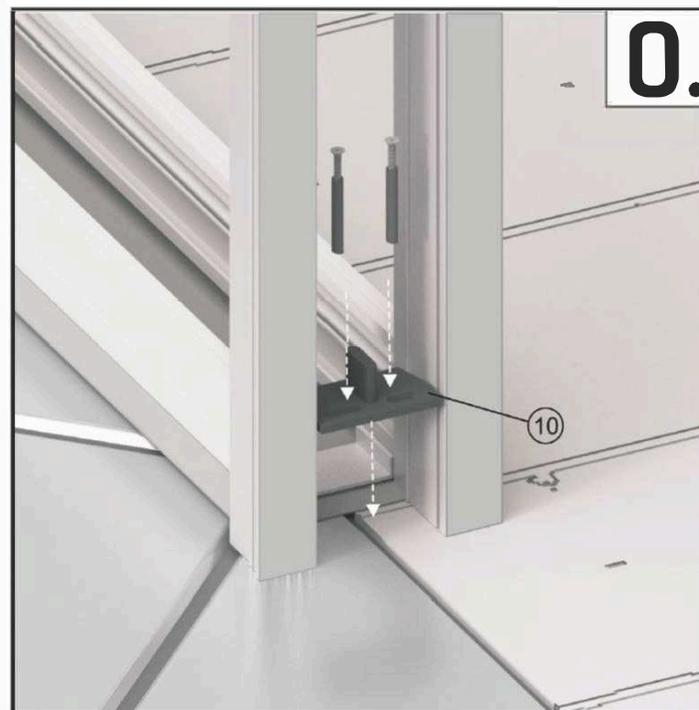
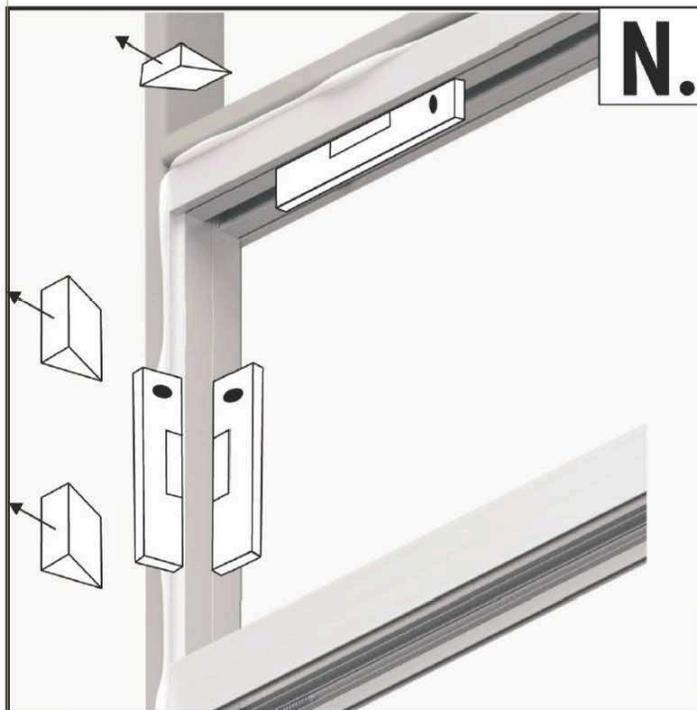
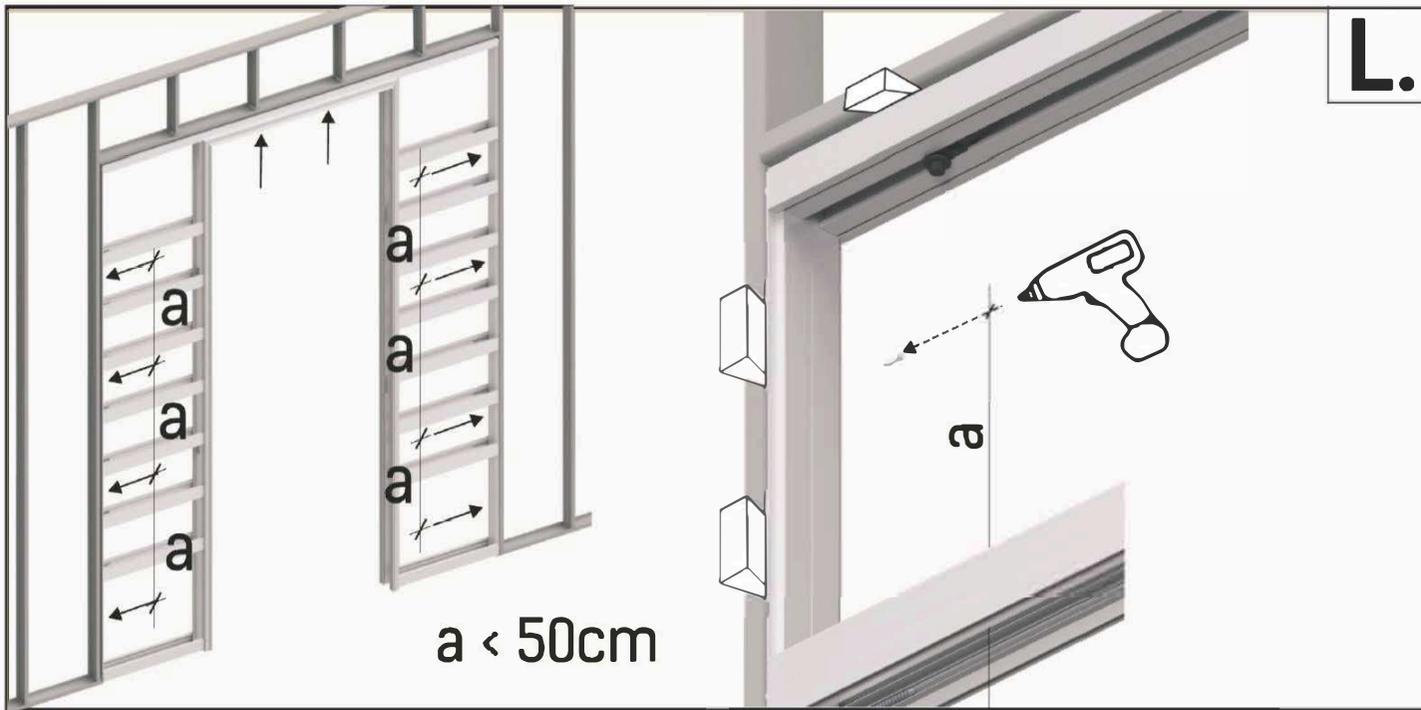


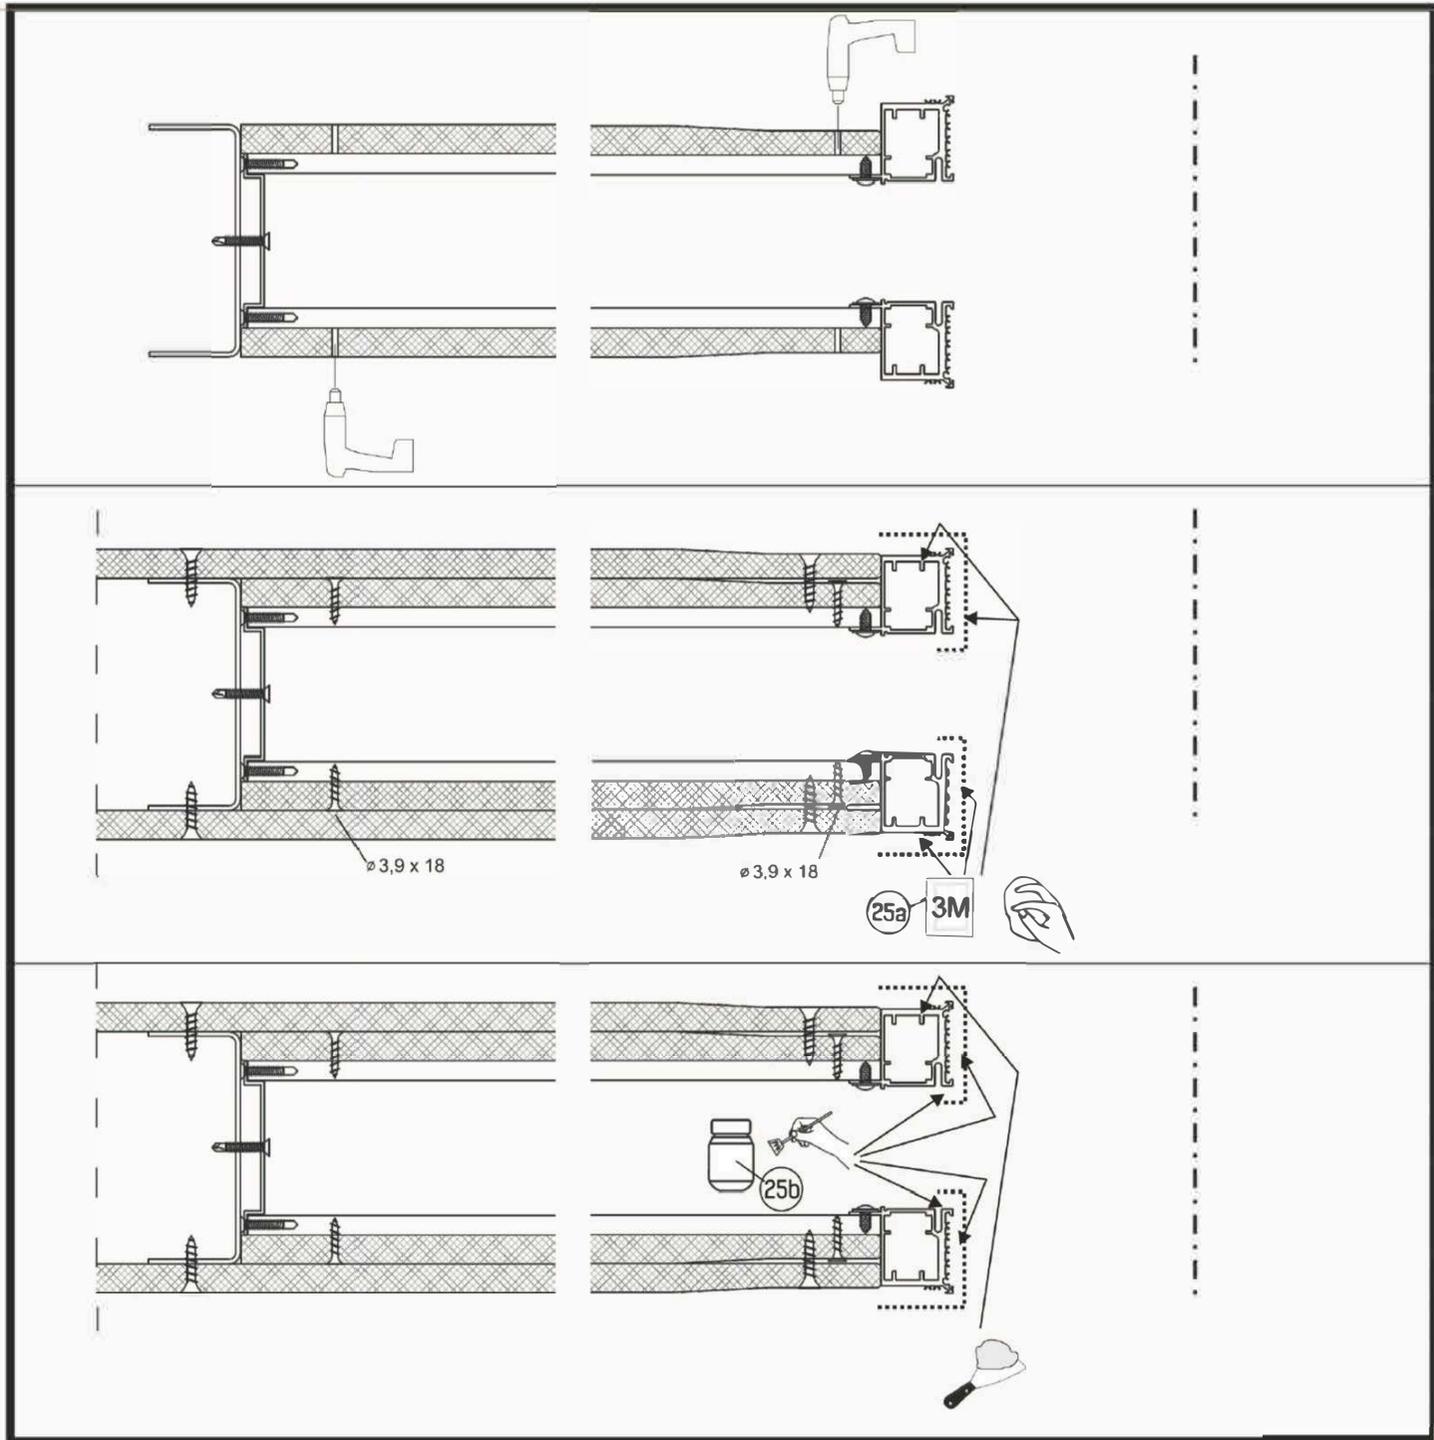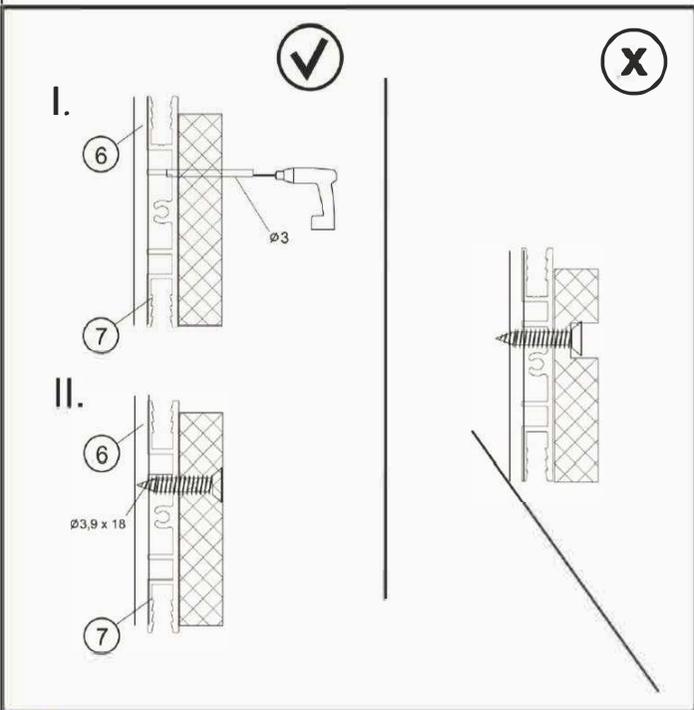


* opcja / option / varianta / volba / вариант



SOFT
CLOSING

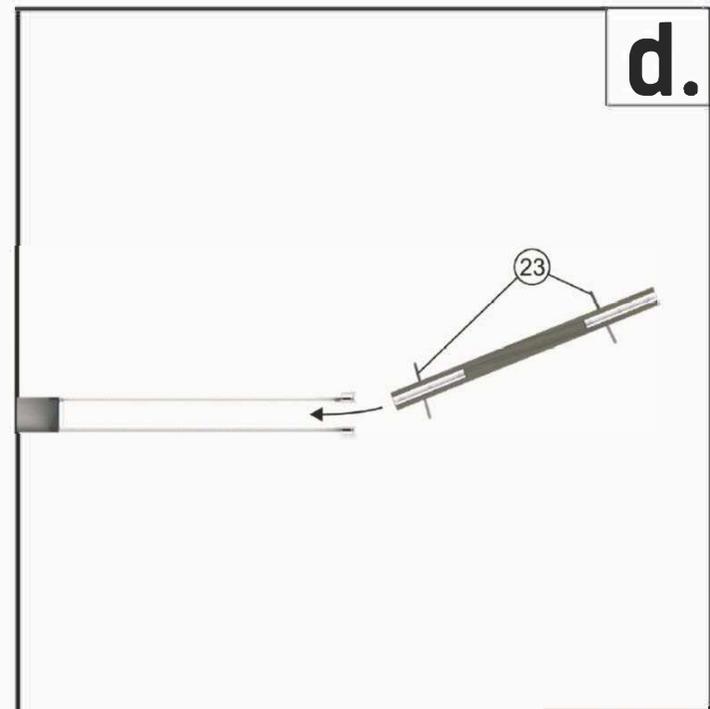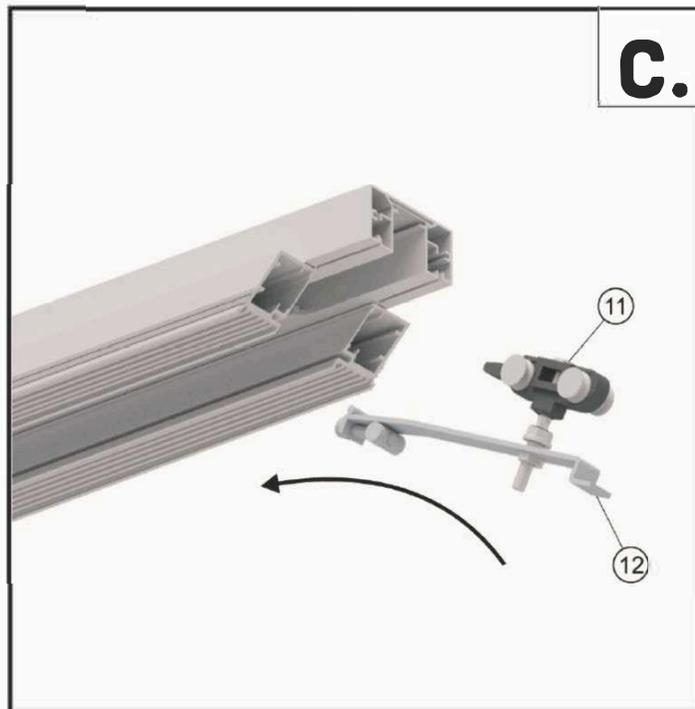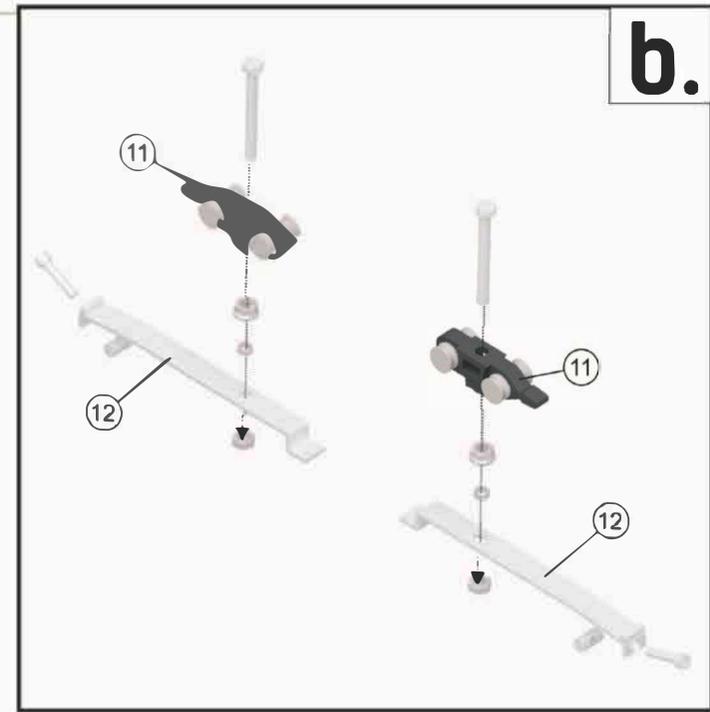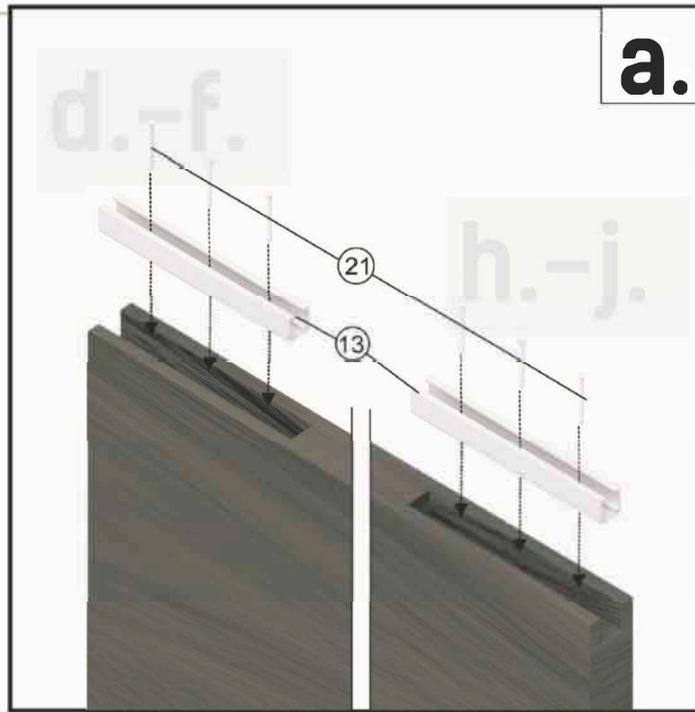


e.

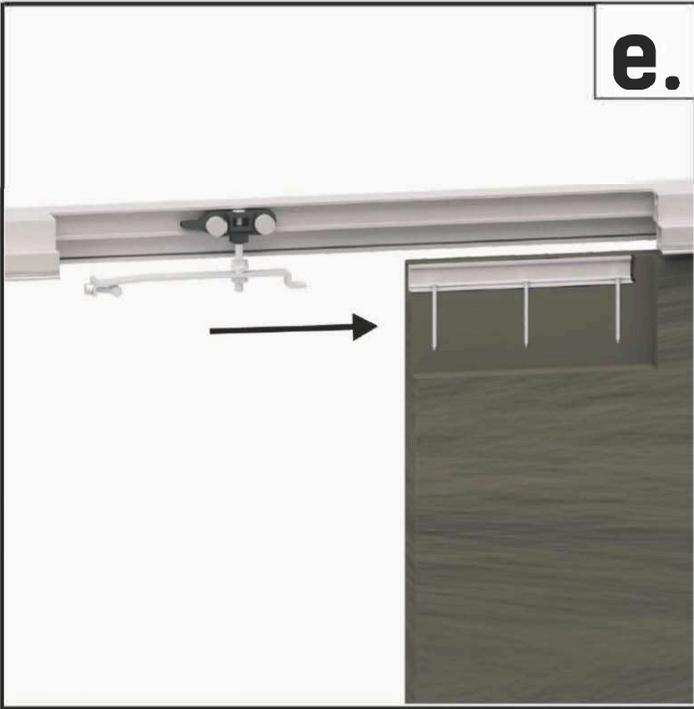


f.




g.




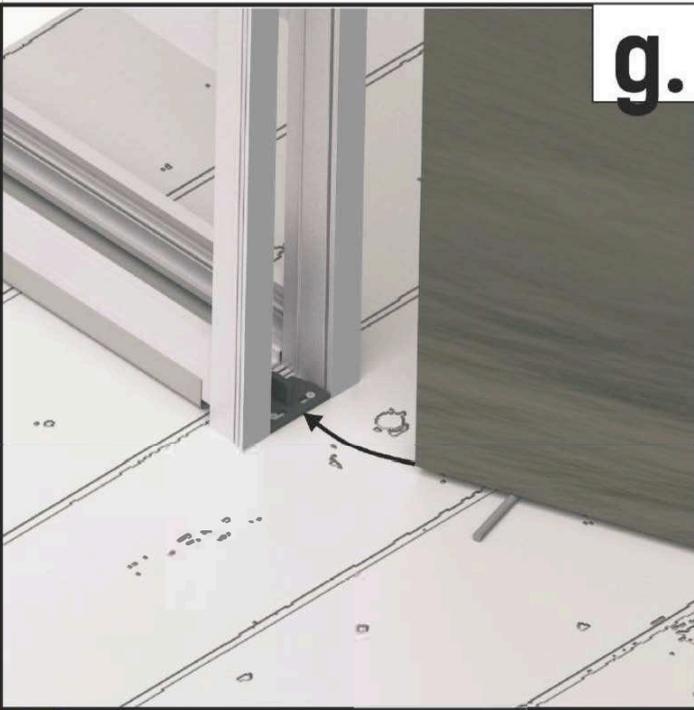





h.


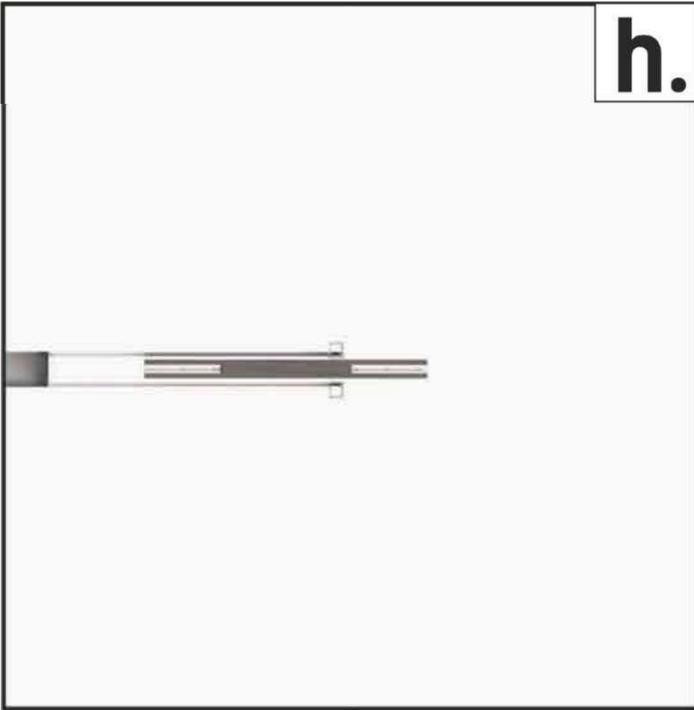



i.

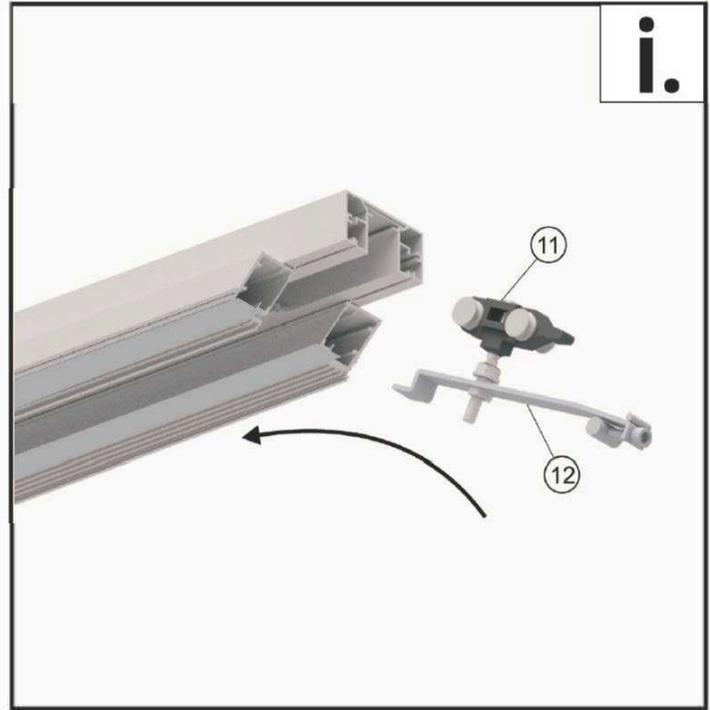

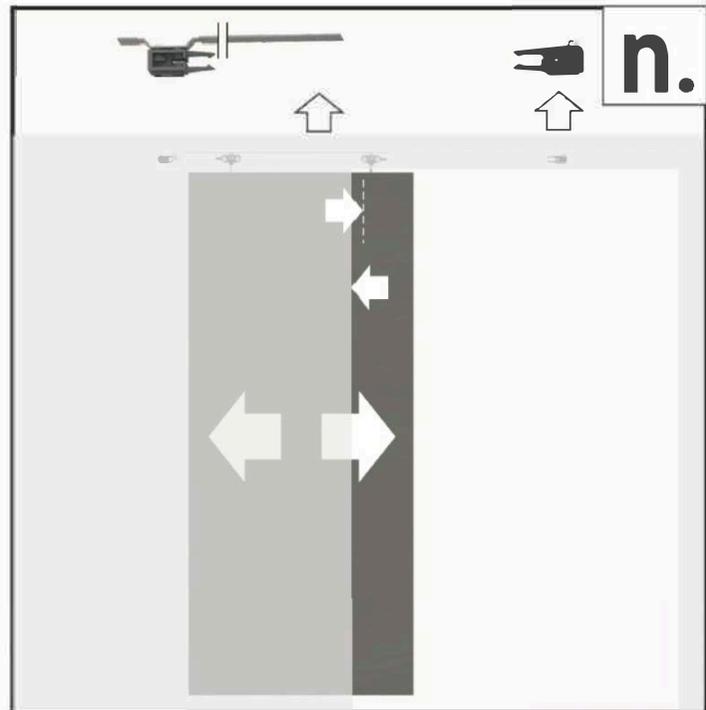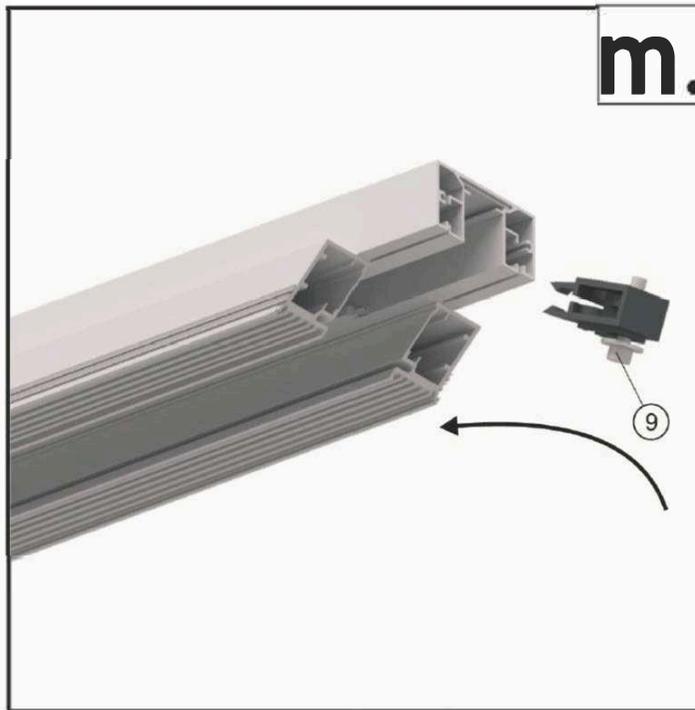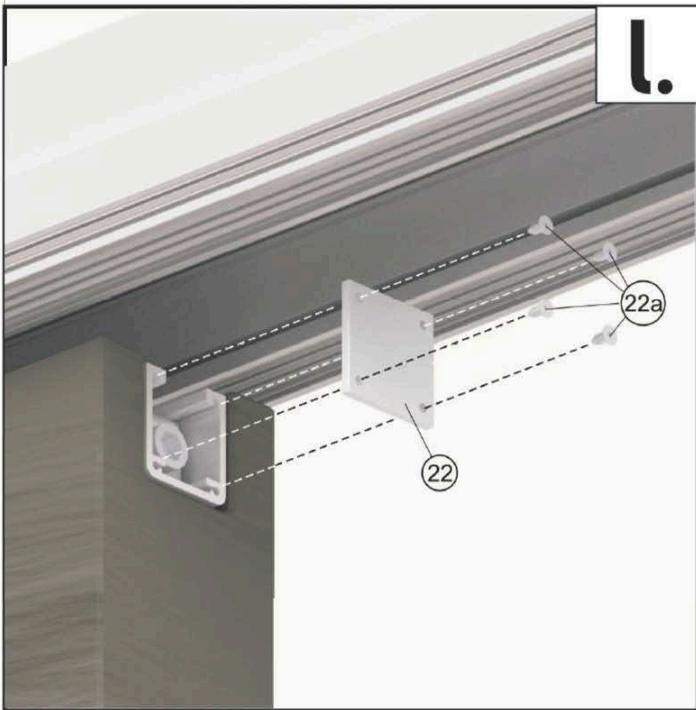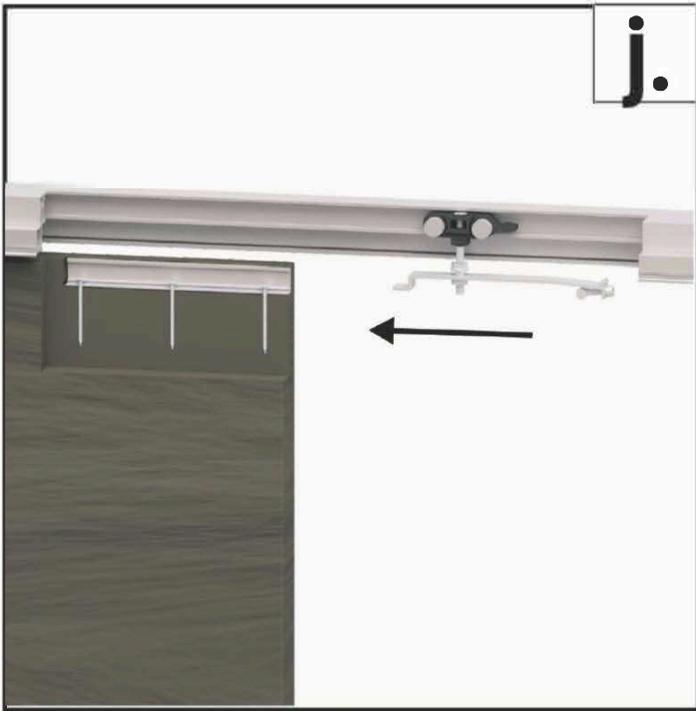


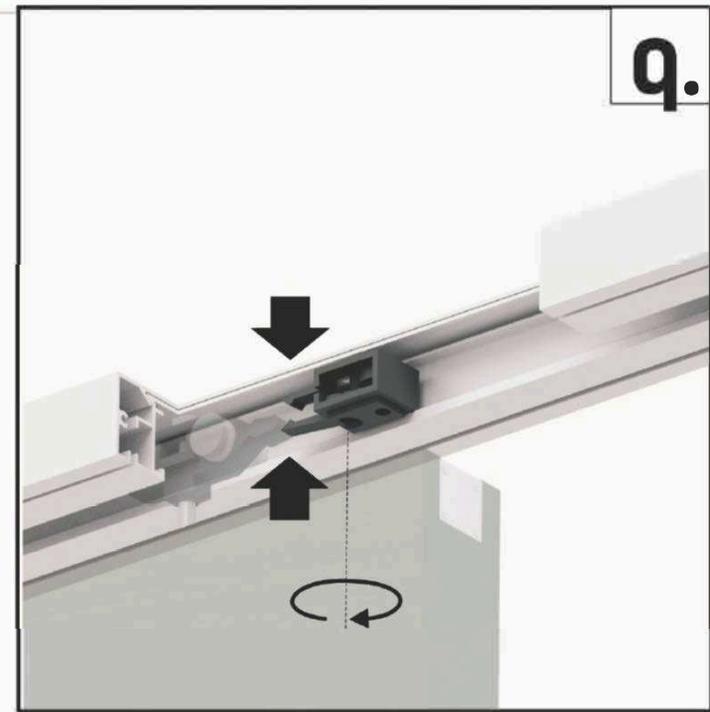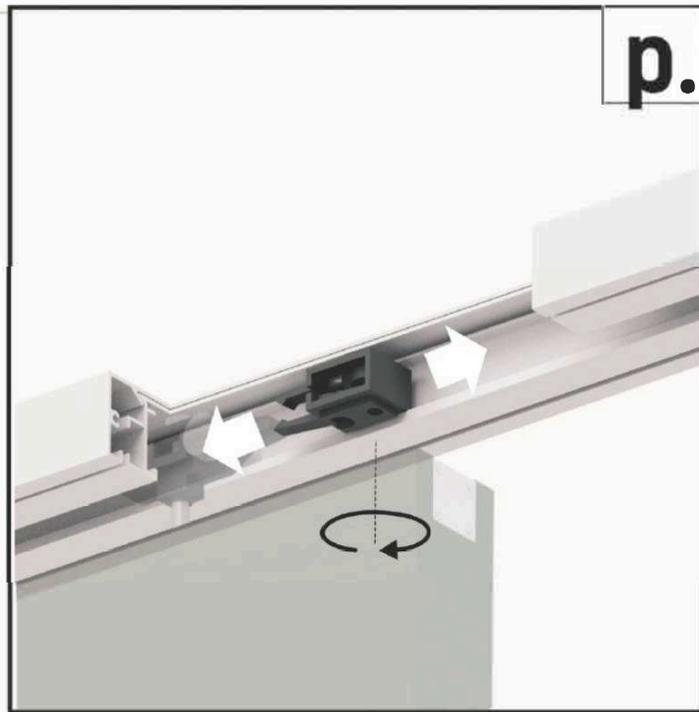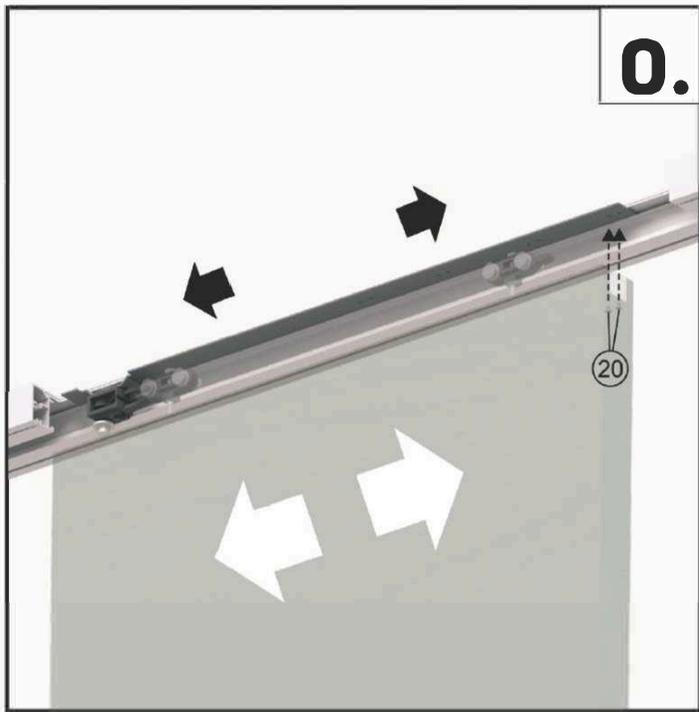


1*  x2	3a*  + 3b*  x4	5a  5b  x2
2*  x2	4*  x4	6  x1

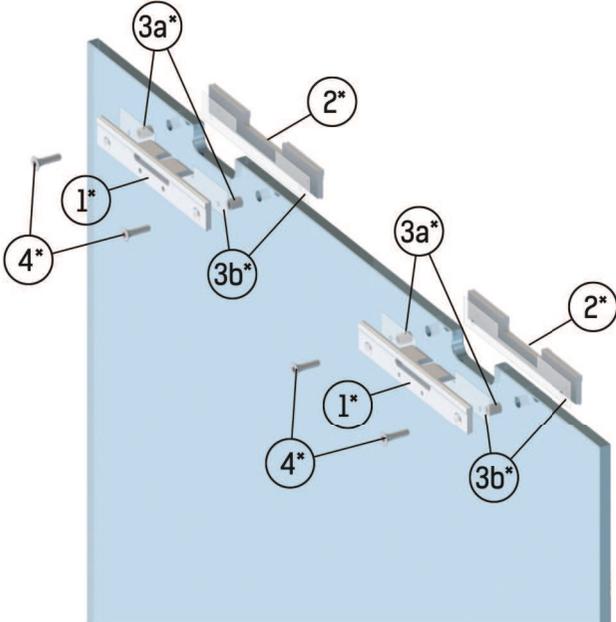

a.'

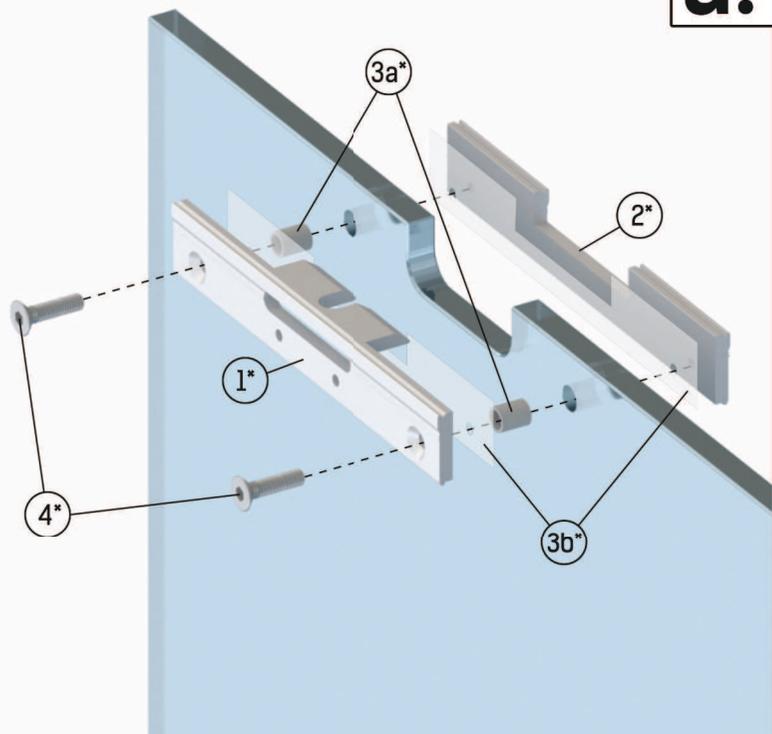

b.'

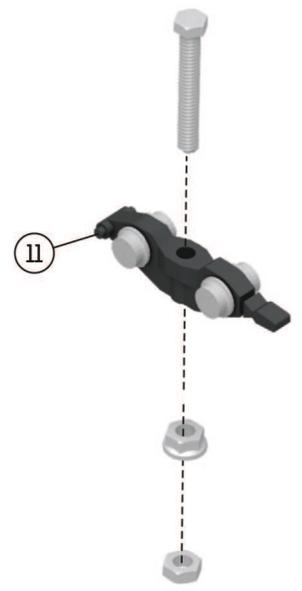

c.'



